



TIREMAAX[®] TIRE CHECK


www.hendrickson-intl.com

866-RIDEAIR (743-3247)

TO MANUALLY CHECK TIRE PRESSURE

1. If tire hose has integral check port, tire pressure can be measured directly at the port using a conventional gauge. If not, proceed to step 2.
2. **Disconnect** tire hose at hubcap.
3. Use a conventional gauge to **measure** tire pressure at hose end.
4. **Align** hose with hubcap port and **tighten** nut. Ensure nut is snug.

Refer to *T51002 TIREMAAX PRO and CP Technical Procedure* or *T51006 TIREMAAX PRO-LB Technical Procedure* for complete system details.

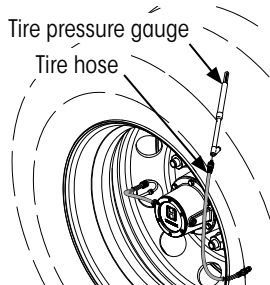

TO DISABLE SYSTEM

1. **Set** trailer park brake.
2. **Locate** TIREMAAX controller.
3. **Turn** supply valve to closed position.

