



H TECHNICAL PROCEDURE

STEERTEK™ NXT High Capacity Steer Axle System for Fire and Rescue Vehicles

SUBJECT: Service Instructions

LIT NO: 17730-311

DATE: April 2023

REVISION: C

TABLE OF CONTENTS

Section 1	Introduction	2	Section 9	Component Replacement	
Section 2	Product Description	2		Fasteners	31
Section 3	Important Safety Notice	4		Shock Absorbers	31
Section 4	Parts List	8		Front Leaf Spring Frame Hanger	32
Section 5	Special Tools	9		Rear Leaf Spring Frame Hanger	32
Section 6	Towing Procedures	10		Leaf Spring and Clamp Group Assembly – Module	33
Section 7	Preventive Maintenance			Leaf Spring & Clamp Group Assembly – Individual Components	37
	Hendrickson Recommended Inspection Intervals	12		STEERTEK NXT High Capacity Axle	41
	Component Inspection	12		Knuckle Assembly	42
	Lubrication Intervals	13		Kingpin Bushing	44
	Kingpin Lubrication	13		Tie Rod Ends and Cross Tube	53
	Tie Rod Ends	14		Air Disc Brakes • Drum Brakes Assemblies	54
	Clamp Group Re-torque Intervals	16	Section 10	Alignment Specifications	55
	Axle Collar Through Bolts	17	Section 11	Torque Specifications	56
	Kingpin Bushing	18	Section 12	Reference Material	59
	Steering Knuckle	18	Section 13	Troubleshooting Guide	60
	Shock Absorbers	19			
	Visual Tire Inspection	21			
Section 8	Alignment & Adjustments				
	Alignment Definitions	23			
	Inspection Prior to Alignment	25			
	Front Wheel Alignment	26			
	Steering Stop	28			
	Toe Setting	28			

SECTION 1 Introduction

This publication is intended to acquaint and assist maintenance personnel in the preventive maintenance, service, repair and rebuild of the Hendrickson STEERTEK™ NXT High Capacity Steer Axle System for applicable Fire and Rescue Vehicles.

NOTE

Use only Hendrickson Genuine parts for servicing this steer axle system.


It is important to read and understand this entire Technical Procedure publication prior to performing any maintenance, service, repair, or rebuild of the product. The information in this publication contains parts lists, safety information, product specifications, features, proper maintenance, service, repair and rebuild instructions for STEERTEK NXT High Capacity Steer Axle System.

Hendrickson reserves the right to make changes and improvements to its products and publications at any time. Contact Hendrickson Tech Services for information on the latest version of this manual at 1-866-755-5968 (toll-free U.S. and Canada), 1-630-910-2800 (outside U.S. and Canada) or email: techservices@hendrickson-intl.com.

The latest revision of this publication is available online at www.hendrickson-intl.com.

SECTION 2 Product Description

FIGURE 2-1

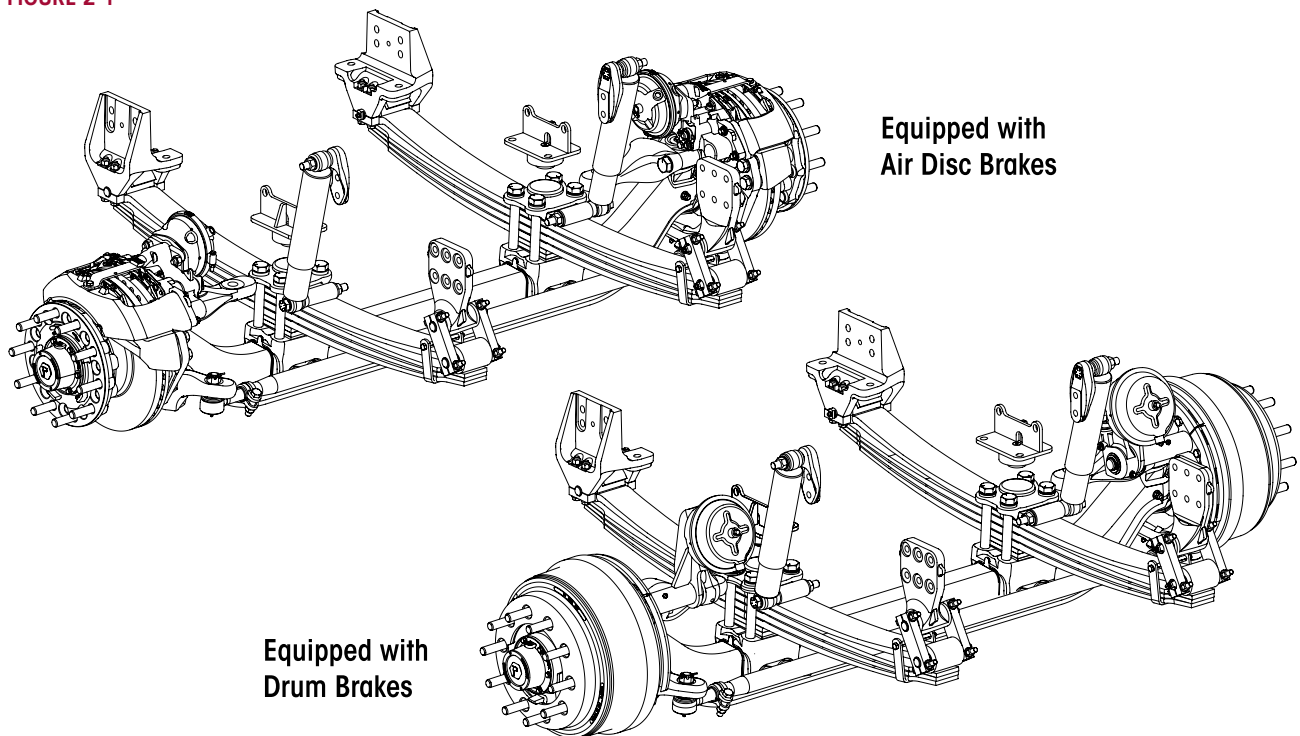



Hendrickson's STEERTEK NXT High Capacity Steer Axle System — is optimized for maximum performance and comfort. Integrated with Hendrickson parabolic springs, this system delivers true suspension efficiency for demanding fire and rescue applications.

The STEERTEK NXT High Capacity steer axle system is durable and lightweight alternative to forged I-beam axles with its box shaped cross section which resists horizontal, vertical and twisting forces.

The unique design provides up to 170 pounds of weight savings by integrating the Hendrickson spring and axle technology. Continuous beam architecture minimizes stress points for added durability.

Multiple Axle Configurations — deep or standard drop, wide or narrow track, flexible spring seat centers and multiple steering arm and tie rod arm configurations.

Brake Compatibility — Compatible with drum 16.5" x 6" or air disc brakes with up to 315 to 445 mm tires.


Knuckle Assembly — Removable kingpin design helps reduced maintenance. Premium kingpin bushings and seals provide enhanced protection from the elements to improve bushing life

Leaf Spring Assembly — Parabolic springs provide increased wheel travel and lower spring rate for improved ride quality. The proprietary threaded pin bushings increase roll stiffness.

TECHNICAL NOTES

1. The STEERTEK NXT high-capacity steer axle system is approved for 100% Off-highway usage. Other applications must be pre-approved by both Hendrickson and vehicle manufacturer. The system has a 16,000 to 24,000 pound capacity with load ratings up to 24,000 pound in certain applications. System capacity represents maximum loads on tires at ground level.
2. The STEERTEK NXT high-capacity system is available with 70.89" Intersections (KPI).
3. The STEERTEK NXT high-capacity steer axle system offers 3.74" axle beam drop height. Axle beam drop is measured from the kingpin intersection to the top of the axle.
4. This system is anti-lock braking system (ABS) ready. This system is compatible with industry standard wheel ends and brakes.
5. The STEERTEK NXT high-capacity steer axle system product identification is etched on the front of the axle beam providing the following information, see Figure 2-2:
 - **Axle part number:** Identifies the features of the axle beam.
 - **Axle assembly number:** Identifies the complete assembly, which includes the steering knuckles and bracket assemblies.

FIGURE 2-2

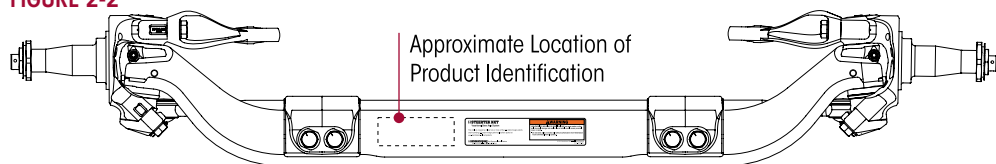



SECTION 3 Important Safety Notice

Proper maintenance, service, and repair are important to the reliable operation of the suspension. The procedures recommended by Hendrickson and described in this technical publication are methods of performing such maintenance, service and repair.

The warnings and cautions should be read carefully to help prevent personal injury and to assure that proper methods are used. Improper maintenance, service, or repair may damage the vehicle, cause personal injury, render the vehicle unsafe in operation, or void manufacturer’s warranty.

Failure to follow the safety precautions in this manual can result in personal injury and / or property damage. Carefully read and understand all safety related information within this publication, on all decals and all such materials provided by the vehicle manufacturer before conducting any maintenance, service or repair.

■ EXPLANATION OF SIGNAL WORDS

Hazard “Signal Words” (Danger-Warning-Caution) appear in various locations throughout this publication. Information accented by one of these signal words must be observed to help minimize the risk of personal injury to service personnel, or possibility of improper service methods which may damage the vehicle or render it unsafe.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

Additional ‘Notes’ or ‘Service Hints’ are utilized to emphasize areas of procedural importance and provide suggestions for ease of repair. The following definitions indicate the use of these signal words as they appear throughout the publication.



INDICATES AN IMMINENTLY HAZARDOUS SITUATION WHICH, IF NOT AVOIDED, WILL RESULT IN SERIOUS INJURY OR DEATH.



INDICATES A POTENTIAL HAZARDOUS SITUATION WHICH, IF NOT AVOIDED, CAN RESULT IN SERIOUS INJURY OR DEATH.



INDICATES A POTENTIAL HAZARDOUS SITUATION WHICH, IF NOT AVOIDED, MAY RESULT IN MINOR OR MODERATE INJURY, OR PROPERTY DAMAGE.

NOTE

An operating procedure, practice condition, etc., which is essential to emphasize.

SERVICE HINT

A helpful suggestion, which will make the servicing being performed a little easier and / or faster.

Also note that particular service operations may require the use of special tools designed for specific purposes. These special tools can be found in the Special Tools section of this publication.



The torque symbol alerts you to tighten fasteners to a specified torque value. Refer to Torque Specifications section of this publication.



■ SAFETY PRECAUTIONS

WARNING

FASTENERS

DISCARD USED FASTENERS. ALWAYS USE NEW FASTENERS TO COMPLETE A REPAIR. FAILURE TO DO SO COULD RESULT IN FAILURE OF THE PART, OR MATING COMPONENTS, LOSS OF VEHICLE CONTROL, PERSONAL INJURY, OR PROPERTY DAMAGE.

LOOSE OR OVER TORQUED FASTENERS CAN CAUSE COMPONENT DAMAGE, LOSS OF VEHICLE CONTROL, PROPERTY DAMAGE, OR SEVERE PERSONAL INJURY. MAINTAIN CORRECT TORQUE VALUE AT ALL TIMES. CHECK TORQUE VALUES ON A REGULAR BASIS AS SPECIFIED, USING A TORQUE WRENCH THAT IS REGULARLY CALIBRATED. TORQUE VALUES SPECIFIED IN THIS TECHNICAL PUBLICATION ARE FOR HENDRICKSON SUPPLIED FASTENERS ONLY. IF NON-HENDRICKSON FASTENERS ARE USED, FOLLOW TORQUE SPECIFICATIONS LISTED IN THE VEHICLE MANUFACTURER'S SERVICE MANUAL.

WARNING

LOAD CAPACITY

ADHERE TO THE PUBLISHED CAPACITY RATINGS FOR THE SUSPENSIONS. ADD-ON AXLE ATTACHMENTS (I.E. SLIDING FIFTH WHEELS) AND OTHER LOAD TRANSFERRING DEVICES CAN INCREASE THE SUSPENSION LOAD ABOVE THE RATED AND APPROVED CAPACITIES WHICH COULD RESULT IN FAILURE AND LOSS OF VEHICLE CONTROL, POSSIBLY CAUSING PERSONAL INJURY OR PROPERTY DAMAGE.

WARNING

SUPPORT THE VEHICLE PRIOR TO SERVICING

PLACE THE VEHICLE ON A LEVEL FLOOR AND CHOCK THE WHEELS TO PREVENT THE VEHICLE FROM MOVING OR ROLLING. DO NOT WORK AROUND OR UNDER A RAISED VEHICLE SUPPORTED BY ONLY A FLOOR JACK. ALWAYS SUPPORT A RAISED VEHICLE WITH RIGID SAFETY STANDS. FAILURE TO DO SO CAN CAUSE SERIOUS PERSONAL INJURY OR DAMAGE TO EQUIPMENT.

CAUTION

PROCEDURES AND TOOLS

A TECHNICIAN USING A SERVICE PROCEDURE OR TOOL WHICH HAS NOT BEEN RECOMMENDED BY HENDRICKSON MUST FIRST SATISFY HIMSELF THAT NEITHER HIS SAFETY NOR THE VEHICLE'S SAFETY WILL BE JEOPARDIZED BY THE METHOD OR TOOL SELECTED. INDIVIDUALS DEVIATING IN ANY MANNER FROM THE INSTRUCTIONS PROVIDED ASSUME ALL RISKS OF POTENTIAL PERSONAL INJURY OR DAMAGE TO EQUIPMENT INVOLVED.

WARNING

PERSONNEL PROTECTIVE EQUIPMENT

ALWAYS WEAR PROPER EYE PROTECTION AND OTHER REQUIRED PERSONAL PROTECTIVE EQUIPMENT TO HELP PREVENT PERSONAL INJURY WHEN PERFORMING VEHICLE MAINTENANCE, REPAIR OR SERVICE.

WARNING

MODIFYING COMPONENTS

DO NOT MODIFY OR REWORK PARTS WITHOUT AUTHORIZATION FROM HENDRICKSON. DO NOT SUBSTITUTE REPLACEMENT COMPONENTS NOT AUTHORIZED BY HENDRICKSON. USE OF MODIFIED, REWORKED, SUBSTITUTE OR REPLACEMENT PARTS NOT AUTHORIZED BY HENDRICKSON MAY NOT MEET HENDRICKSON'S SPECIFICATIONS, AND CAN RESULT IN FAILURE OF THE PART, LOSS OF VEHICLE CONTROL, POSSIBLE PERSONAL INJURY OR PROPERTY DAMAGE, AND WILL VOID ANY APPLICABLE WARRANTIES. USE ONLY HENDRICKSON AUTHORIZED REPLACEMENT PARTS.

WARNING

UNAUTHORIZED REPAIR OR RECONDITIONING

UNAUTHORIZED REPAIR OR RECONDITIONING OF SUSPENSION OR AXLE COMPONENTS ARE NOT ALLOWED, SEE LABEL IN FIGURE 3-1. ANY SUSPENSION OR AXLE COMPONENTS FOUND TO BE DAMAGED OR OUT OF SPECIFICATIONS MUST BE REPLACED. ALL MAJOR HENDRICKSON COMPONENTS ARE HEAT TREATED AND TEMPERED. STEERTEK NXT HIGH CAPACITY AXLE COMPONENTS CANNOT BE BENT, WELDED, HEATED, OR REPAIRED WITHOUT REDUCING THE STRENGTH OR LIFE OF THE COMPONENT. FAILURE TO FOLLOW THESE GUIDELINES CAN CAUSE LOSS OF VEHICLE CONTROL, POSSIBLE PERSONAL INJURY, DEATH, OR PROPERTY DAMAGE AND WILL VOID APPLICABLE WARRANTIES.

 **WARNING****TORCH / WELDING**

DO NOT USE A CUTTING TORCH TO REMOVE ANY FASTENERS. THE USE OF HEAT ON SUSPENSION COMPONENTS WILL ADVERSELY AFFECT THE STRENGTH OF THESE PARTS. A COMPONENT DAMAGED IN THIS MANNER CAN RESULT IN THE LOSS OF VEHICLE CONTROL AND POSSIBLE PERSONAL INJURY OR PROPERTY DAMAGE.

EXERCISE EXTREME CARE WHEN HANDLING OR PERFORMING MAINTENANCE IN THE AREA OF THE LEAF SPRING ASSEMBLY AND AXLE. DO NOT CONNECT ARC WELDING GROUND LINE TO THE LEAF SPRING ASSEMBLY OR AXLE. DO NOT STRIKE AN ARC WITH THE ELECTRODE ON THE LEAF SPRING ASSEMBLY OR AXLE. DO NOT USE HEAT NEAR THE LEAF SPRING ASSEMBLY OR AXLE. DO NOT NICK OR GOUGE THE LEAF SPRING ASSEMBLY OR AXLE. SUCH IMPROPER ACTIONS CAN DAMAGE THE LEAF SPRING ASSEMBLY OR THE AXLE, AND CAN CAUSE LOSS OF VEHICLE CONTROL AND POSSIBLE PERSONAL INJURY OR PROPERTY DAMAGE.

 **WARNING****PARTS CLEANING**

SOLVENT CLEANERS CAN BE FLAMMABLE, POISONOUS AND CAUSE BURNS. TO HELP AVOID SERIOUS PERSONAL INJURY, CAREFULLY FOLLOW THE MANUFACTURER'S PRODUCT INSTRUCTIONS AND GUIDELINES AND THE FOLLOWING PROCEDURE:

- WEAR PROPER EYE PROTECTION.
- WEAR CLOTHING THAT PROTECTS YOUR SKIN.
- WORK IN A WELL VENTILATED AREA.
- DO NOT USE GASOLINE, OR SOLVENTS THAT CONTAIN GASOLINE. GASOLINE CAN EXPLODE.
- HOT SOLUTION TANKS OR ALKALINE SOLUTIONS MUST BE USED CORRECTLY. FOLLOW THE MANUFACTURER'S RECOMMENDED INSTRUCTIONS AND GUIDELINES CAREFULLY TO HELP PREVENT PERSONAL ACCIDENT OR INJURY.

DO NOT USE HOT SOLUTION TANKS OR WATER AND ALKALINE SOLUTIONS TO CLEAN GROUND OR POLISHED PARTS. DOING SO WILL CAUSE DAMAGE TO THE PARTS AND VOID ANY APPLICABLE WARRANTY.

 **WARNING****SHOCK ABSORBERS**

THE SHOCK ABSORBERS ARE A REQUIRED COMPONENT WHETHER SUPPLIED BY HENDRICKSON OR THE VEHICLE MANUFACTURER. HENDRICKSON IS NOT RESPONSIBLE FOR COMPONENTS SUPPLIED BY THE VEHICLE MANUFACTURER. REFER TO VEHICLE MANUFACTURER FOR ASSISTANCE WITH INSPECTION, MAINTENANCE AND REBUILD INSTRUCTIONS.

 **WARNING****DAMAGED AXLE COMPONENTS**

IF A VEHICLE EQUIPPED WITH A STEERTEK NXT HIGH CAPACITY SYSTEM IS INVOLVED IN A CRASH, THE AXLE STEER KNUCKLES MUST BE DISASSEMBLED AND A THOROUGH INSPECTION OF THE AXLE MUST BE PERFORMED NOTING THE CONDITION OF THE AXLE BEAM, KINGPINS, AND KNUCKLE ASSEMBLIES, INCLUDING THE AREAS OF AXLE TO KINGPIN INTERFACE, FOR ANY DAMAGE, GAPS, KINGPIN MOVEMENT OR PLAY. IF ANY COMPONENT APPEARS DAMAGED, OR THE KINGPINS APPEAR TO CONTAIN ANY DAMAGE, GAPS, MOVEMENT OR PLAY, THE COMPLETE AXLE ASSEMBLY MUST BE REPLACED.

IN ADDITION, IN THE EVENT A CRASH RESULTS IN EXCESSIVE SIDE LOAD DAMAGE TO ADJACENT PARTS, SUCH AS A BENT WHEEL, HUB, OR SPINDLE, IT IS STRONGLY RECOMMENDED TO REPLACE SUCH ADJACENT PARTS AND THE COMPLETE AXLE ASSEMBLY.

CONTACT HENDRICKSON TECH SERVICES WITH ANY QUESTIONS. FAILURE TO REPLACE ANY DAMAGED COMPONENTS CAN CAUSE LOSS OF VEHICLE CONTROL, POSSIBLE PERSONAL INJURY, DEATH, OR PROPERTY DAMAGE AND WILL VOID ANY APPLICABLE WARRANTIES.

 **WARNING****AXLE**

UNAUTHORIZED WELDING OR MODIFICATIONS CAN CAUSE CRACKS OR OTHER AXLE STRUCTURAL DAMAGE AND RESULT IN LOSS OF VEHICLE CONTROL, SEVERE PERSONAL INJURY OR DEATH. DO NOT BEND, WELD OR MODIFY AXLE WITHOUT AUTHORIZATION FROM HENDRICKSON TRUCK COMMERCIAL VEHICLE SYSTEMS.



AXLE CAMBER IS NOT ADJUSTABLE

DO NOT CHANGE THE AXLE CAMBER ANGLE OR BEND THE AXLE BEAM, SEE FIGURE 3-1. BENDING THE AXLE BEAM TO CHANGE THE CAMBER ANGLE CAN DAMAGE THE AXLE AND REDUCE AXLE STRENGTH, WILL VOID HENDRICKSON'S WARRANTY AS APPLICABLE, AND CAN CAUSE LOSS OF VEHICLE CONTROL, POSSIBLY CAUSING PERSONAL INJURY OR PROPERTY DAMAGE.





IMPROPER JACKING METHOD

IMPROPER JACKING METHOD CAN CAUSE STRUCTURAL DAMAGE AND RESULT IN LOSS OF VEHICLE CONTROL, SEVERE PERSONAL INJURY OR DEATH. DO NOT USE AXLE BEAM OUTBOARD OF AXLE SEATS. REFER TO VEHICLE MANUFACTURER FOR PROPER JACKING INSTRUCTIONS, SEE FIGURE 3-1.

NOTE: REPLACE ANY SAFETY DECALS THAT ARE FADED, TORN, MISSING, ILLEGIBLE, OR OTHERWISE DAMAGED. CONTACT HENDRICKSON TO ORDER REPLACEMENT LABELS.

FIGURE 3-1

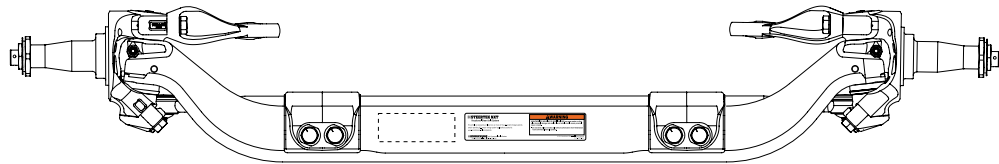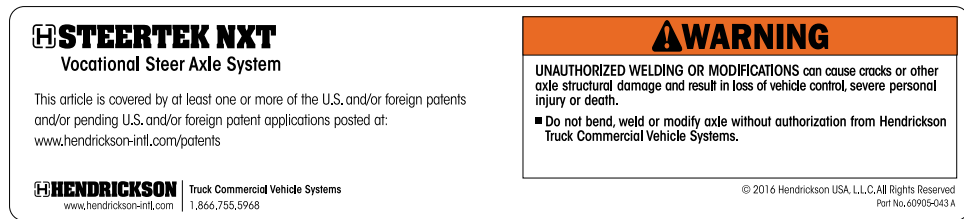

OFF-ROADWAY TOWING

WHEN A VEHICLE IS DISABLED AND EQUIPPED WITH A STEERTEK NXT HIGH CAPACITY AXLE, CARE MUST BE TAKEN TO ENSURE THERE IS NO DAMAGE TO THE SUSPENSION OR AXLE WHEN TOWING THE VEHICLE. THE USE OF A TOW STRAP IS NECESSARY TO TOW A DISABLED VEHICLE TO A REPAIR FACILITY PARKING LOT INTO THE SHOP BAY. THE TOW STRAPS SHOULD BE CONNECTED TO THE TOW HOOKS PROVIDED BY THE VEHICLE MANUFACTURER AT THE FRONT OF THE BUMPER. IF THE USE OF TOW HOOKS IS NOT AN OPTION, THEN A TOW STRAP MAY BE WRAPPED AROUND THE FRONT AXLE, (SEE FIGURE 3-2) IN A MANNER THAT IS ACCEPTABLE FOR TOWING THE VEHICLE FROM A REPAIR FACILITY PARKING LOT INTO THE SHOP BAY. DO NOT USE A TOW CHAIN AROUND THE FRONT AXLE OR WITH A SINGLE POINT LOCATION TO TOW THE VEHICLE. DOING SO WILL DAMAGE THE AXLE AND VOID ANY APPLICABLE WARRANTY, SEE FIGURE 3-2. REFER TO TOWING PROCEDURES SECTION OF THIS PUBLICATION FOR DETAILED TOWING INSTRUCTIONS ON ON-HIGHWAY TOWING.

FIGURE 3-2





SECTION 4 Parts List

Refer to the specific parts list for the STEERTEK NXT high capacity steer axle system equipped on your vehicle available online at:
www.hendrickson-intl.com/Truck/Fire-Rescue/STEERTEK-NXT-Fire

NOTE Additional brake component part and service information is referenced in the applicable Parts Lists.

FIGURE 4-1

**STEERTEK™ NXT
FIRE/RESCUE**
 High Capacity Fabricated Front Steer Axle System

STEERTEK™ NXT High Capacity fabricated steer axle system is optimized for maximum performance and comfort. Integrated with Hendrickson parabolic springs, this system delivers true suspension efficiency for demanding fire and rescue applications.

Parts Lists			
SP-305 STEERTEK NXT High Capacity Parts List for KME Vehicles	C	1/6/2023	4.12 MB
SP-306 STEERTEK NXT High Capacity for Sutphen Vehicles	D	10/31/2022	3.98 MB
SP-311 STEERTEK NXT High Capacity Parts List for Rosenbauer Vehicles	D	4/29/2022	2.33 MB
SP-335 STEERTEK NXT High Capacity Parts List for Ferrara	B	7/19/2022	2.39 MB
SP-336 STEERTEK NXT High Capacity Parts List for Spartan Fire / Rescue Vehicles	A	8/2/2022	1.81 MB
SP-338 STEERTEK NXT High Capacity for Pierce Fire / Rescue Vehicles	A	12/28/2022	2.8 MB




SECTION 5 Special Tools


SHOP MADE TOOLS

These shop made tools are designed to install and remove kingpin bushings. Bushing tools are made from cold rolled steel or equivalent. Drawings are for reference only. Hendrickson does not supply these.


KINGPIN BUSHING / SEAL DRIVER

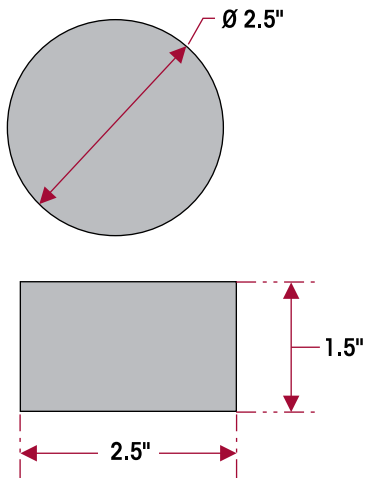

KINGPIN BUSHING AND SEAL INSTALLER / REMOVER

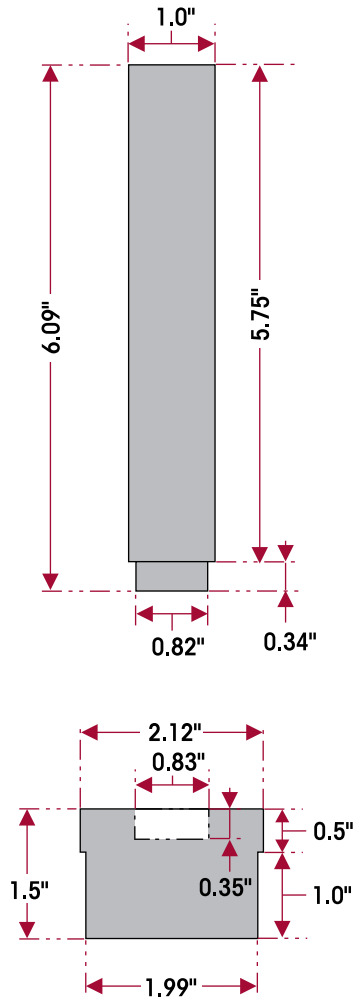

AXLE COLLAR DRIVER

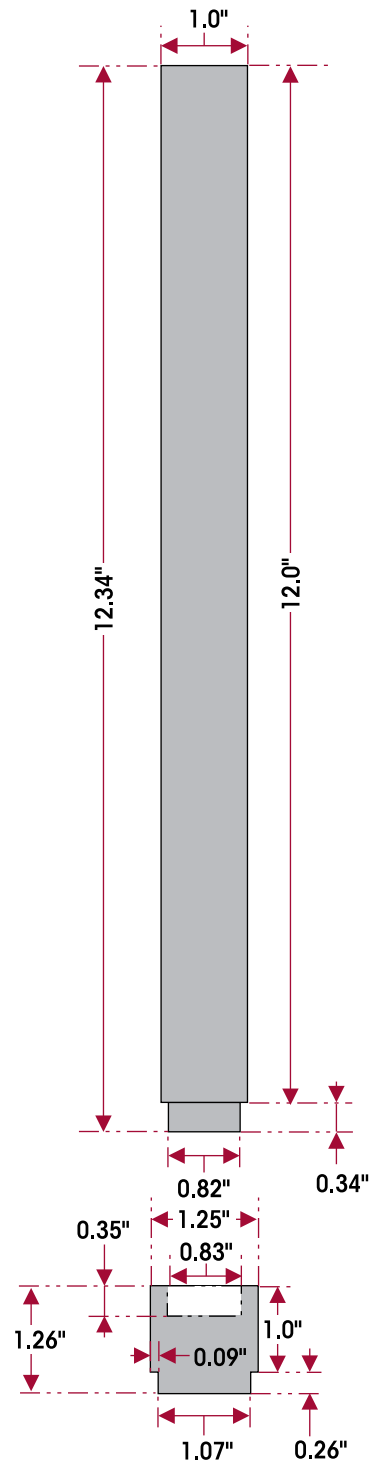

KINGPIN BUSHING TOOL – ADJUSTABLE STRAIGHT FLUTE REAMER

The dimension of cutting diameter must facilitate a range of **2.00"-2.01"**



SECTION 6

Towing Procedures

ON-HIGHWAY AND ON-ROADWAY

Please read, understand and comply with any additional towing instructions and safety precautions that may be provided by the vehicle manufacturer.

Hendrickson will not be responsible for any damage to the axle, suspension or other vehicle components resulting from any towing method or fixture not authorized by Hendrickson.

Please contact Hendrickson Tech Services toll-free at 1-866-755-5968 (U.S. and Canada) or send email to: techservices@hendrickson-intl.com with any questions regarding proper towing procedures for vehicles equipped with a STEERTEK NXT High Capacity system.

Hendrickson recommends that a vehicle equipped with a STEERTEK NXT High Capacity system be towed by the following methods (listed in order of preference) for ON-HIGHWAY or ON-ROADWAY applications.

- **METHOD 1** — Wheel lift, the ideal towing procedure
- **METHOD 2** — Towing the vehicle from the rear
- **METHOD 3** — Conventional axle fork

■ Method 1 — Wheel Lift

This method provides the greatest ease for towing the vehicle. Lifting at the tires helps reduce the risk of possible damage to the axle, and suspension components during towing operations, see Figure 6-1.

FIGURE 6-1



■ Method 2 — Towing vehicle from the rear

This method is preferred when the proper equipment is not available to perform the wheel lift method and is necessary for wreckers not equipped with an under lift system.



■ Method 3 — Axle FORK Lift

This is an alternative method for towing the vehicle, but requires standard tow forks and designated lift points.

NOTE

When lifting a vehicle with an under lift boom, care must be taken not to damage underbody components.

- Ensure there is sufficient clearance between underbody components and the boom
 - Release the tractor brakes
 - Install safety straps prior to towing the vehicle, it is preferred to use nylon safety straps. Chains have a tendency to bind and may cause damage to the axle.
1. Use a tow fork with a minimum of 4.5" Opening, 2" Shank, see Figure 6-2.
 2. Install the fork in the boom properly.
 3. The proper tow fork location is centered between the locknuts on the axle spring seats, see Figure 6-3.

FIGURES 6-2



FIGURE 6-3



OFF-ROADWAY TOWING



WHEN A VEHICLE IS DISABLED AND EQUIPPED WITH A STEERTEK NXT HIGH CAPACITY SYSTEM, CARE MUST BE TAKEN TO ENSURE THERE IS NO DAMAGE TO THE SUSPENSION OR AXLE WHEN TOWING THE VEHICLE. THE USE OF TOW STRAPS ARE NECESSARY TO TOW A DISABLED VEHICLE FROM A REPAIR FACILITY PARKING LOT INTO THE SHOP BAY. THE TOW STRAPS SHOULD BE CONNECTED TO THE TOW HOOKS PROVIDED BY THE VEHICLE MANUFACTURER AT THE FRONT OF THE BUMPER. IF THE USE OF TOW HOOKS IS NOT AN OPTION, THEN TOW STRAPS MAY BE WRAPPED AROUND THE FRONT STEERTEK NXT HIGH CAPACITY AXLE, (SEE FIGURE 6-4) IN A MANNER THAT IS ACCEPTABLE FOR TOWING THE VEHICLE FROM A REPAIR FACILITY PARKING LOT INTO THE SHOP BAY. DO NOT USE A TOW CHAIN AROUND THE FRONT STEERTEK NXT HIGH CAPACITY AXLE TO TOW THE VEHICLE, DOING SO WILL DAMAGE THE AXLE AND VOID ANY APPLICABLE WARRANTY, SEE FIGURE 6-4.

- NYLON STRAPS OR CHAINS ARE NOT RECOMMENDED FOR ON-HIGHWAY OR ON-ROADWAY TOWING.

FIGURE 6-4





SECTION 7 Preventive Maintenance

HENDRICKSON RECOMMENDED INSPECTION INTERVALS

Following appropriate inspection procedures are important to help ensure the proper maintenance and operation of the STEERTEK NXT High Capacity suspension system and component parts.

Hendrickson recommends to visually inspect for proper assembly and function, overall condition and any signs of damage. Check for all of the following as per the inspection intervals shown and replace components as necessary:

- Signs of unusual movement, loose or missing components, abrasive or adverse contact with other components, damaged or cracked parts and improper suspension function or alignment

	PRE-DELIVERY	FIRST IN-SERVICE	PREVENTIVE MAINTENANCE
	within the first 100 miles (160 km)	1,000 miles (1,600 km), 100 hours or whichever comes first	25,000 miles (40,000 km), every 6 months or whichever comes first
Axle Collar Through Bolts	■	■	■
Axle Seats	■	■	■
Clamp Group	■	■	■
Fasteners (including Kingpin Draw Key)	■	■	■
Front Wheel Alignment	■	■	■
Leaf Spring Assembly and Bushings	■	■	■
Shock Absorbers	■		■
Steering Operation	■		■
STEERTEK NXT Axle Assembly and Tie Rods	■	■	■
Tire Wear			■
Wear and Damage			■

See the vehicle manufacturer’s applicable publications for other preventive maintenance requirements.

COMPONENT INSPECTION

- **Axle collar through bolts** — Inspect for loose axle mounting hardware, refer to Axle Collar Through Bolts in this section.
- **Axle seat** — Inspect axle seats for any cracks or damage. Inspect axle seat liners, check for any missing liner material. If liner material is missing disassemble clamp group and replace liners, see Component Replacement Section of this publication.
- **Clamp group** — Check tightening torque on clamp group mounting hardware, refer to the Leaf Spring & Clamp Group Assembly Re-torque Interval in this section.
- **Fasteners** — Visually inspect for any loose or damaged fasteners on the entire suspension. Make sure all fasteners are tightened to the specified torque. Refer to the Torque Specifications section of this publication. Use a calibrated torque wrench to check torque in a tightening direction. As soon as the fastener starts to move, record the torque. Correct the torque if necessary. Replace any worn or damaged fasteners.

**NOTE**

Torque values shown in this publication apply only if Hendrickson supplied fasteners are used. If non-Hendrickson fasteners are used, follow the torque specifications listed in the vehicle manufacturer's service manual.

- **Front wheel alignment** — Refer to Alignment & Adjustments section of this publication.
- **Leaf spring assembly and bushings** — Inspect for any cracks. Replace if cracked or broken. Check leaf spring bushings for any wear or deterioration. Replace if leaf spring assembly as necessary, see the Component Replacement section of this publication for replacement procedure.
- **Shock absorbers** — Look for any signs of dents or leakage, misting is not considered a leak. See the Shock Absorbers in this section.
- **Steering Operation** — All steering components must move freely through the full range of motion from axle stop to axle stop. Check for looseness at all pivot points. Inspect and lubricate all pivot points. Refer to the Troubleshooting Guide section of this publication.
- **STEERTEK NXT High Capacity axle and tie rods** — Visually inspect for any cracks or dents on the axle, and also refer to the Tie Rod Ends Lubrication and inspection procedure in this section. Replace as necessary.
- **Tire wear** — Inspect tires for wear patterns that may indicate suspension damage or misalignment, see Visual Tire Inspection in this section. Replace as necessary.
- **Wear and damage** — Inspect all parts of suspension for wear and damage. Look for bent or cracked parts. Replace all worn or damaged parts.

LUBRICATION INTERVALS

For vehicles equipped with the STEERTEK NXT High Capacity system, regular lubrication intervals should be followed to help prevent premature wear to the kingpin bushings and tie rod ends, see Table 7-1 below.

NOTE

The recommended service lubrication interval is a guideline, the vehicle may require increased lubrication interval depending on severity of operation.

TABLE 7-1

STEERTEK NXT High Capacity — Greasing and Lubrication Specifications				
Component	Greasing Interval	Grease	NLGI Grade	Outside Temperature
Kingpin Bushings	Maximum of 10,000 miles (16,100 km) or 90 days, whichever comes first.	Multipurpose	2	Refer to the lubricant manufacturer's specifications for the temperature service limits applicable to your area.
Tie Rod Ends				
Threaded Pin	Every 3 months	Lithium Base	2	
Front Wheel Bearing	15,000 miles (24,000 km)	SAE 80W-90 GL-5	2	
Wheel Seal • Hub Cap	Comply with Conmet Service Bulletin No. 10009945 (Lubricant Compatibility Listing)			
Drag Link	Refer to the Vehicle Manufacturer			

NOTE: Lubrication greases acceptable for use on the STEERTEK NXT High Capacity system will carry a designation of NLGI #2 EP and rated GC-LB or equivalent.

KINGPIN LUBRICATION

1. Place the vehicle on the ground.
2. Prior to greasing the kingpins on the vehicle, the suspension must be in a loaded condition.
3. Clean off all the grease zerks and grease gun tip with a clean shop towel prior to lubrication.
4. Lubricate the kingpins through the grease zerks on the top and bottom of the steering knuckle, see Lubrication Specification Table 7-1.

- Force the required lubricant into the upper and lower kingpin grease zerks until new lubricant flows out from the upper kingpin connection and steering knuckle and the thrust bearing purge location, see Figures 7-1 and 7-2.

NOTE

Greasing at the lower zerk should purge grease from the thrust bearing shell. The left and right side of the STEERTEK NXT High Capacity system have steel roller thrust bearings.

FIGURE 7-1


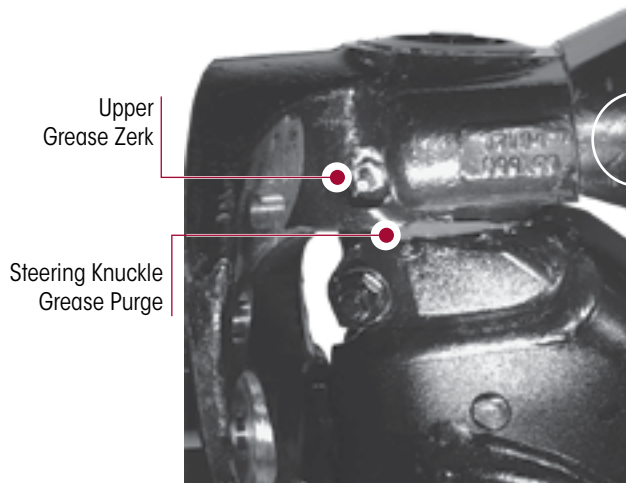


FIGURE 7-2

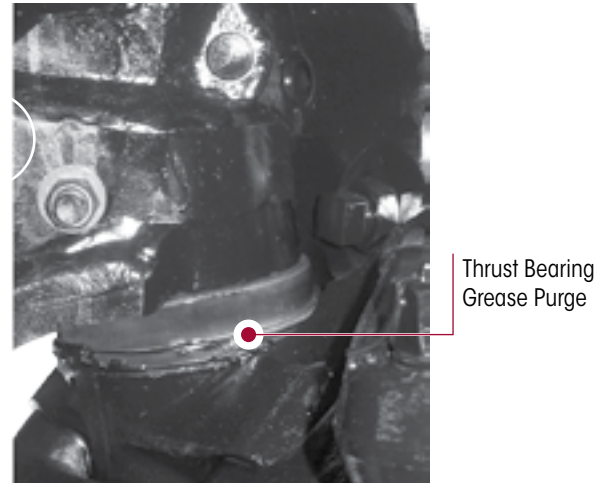

TIE ROD ENDS

LUBRICATION PROCEDURE


- Turn the vehicle wheels straight ahead.
- Wipe the grease zerk and grease gun tip with clean shop towels.
- Wipe the seal / boot clean with shop towels.
- Attach a grease gun to the grease zerk. Either a hand or pneumatic grease gun is acceptable. If air operated grease gun is used, system air pressure should not exceed 150 psi (1035 kPa).



EXCEEDING THE MAXIMUM AIR PRESSURE TO THE GREASE ZERK CAN CAUSE DAMAGE TO THE DUST BOOT AND COMPONENT FAILURE, SEE FIGURE 7-3.

- Dirt, water, and discolored old grease should flow from the relief vents or purge holes near the boot crimp or bellows area, see Figure 7-3.
- Continue to purge grease until fresh grease flows from the purge area.
- The tie rod ends are designed for lube service. If a tie rod end will not accept grease proceed as follows:
 - Remove the grease zerk
 - Inspect the threaded grease zerk hole in the tie rod end and remove any obstructions
 - Install a new grease zerk
 - Continue the lubrication procedure. If the tie rod end will not accept grease following this procedure it will be necessary to replace the tie rod end, (see Tie Rod End replacement in the Component Replacement section of this publication)

FIGURE 7-3

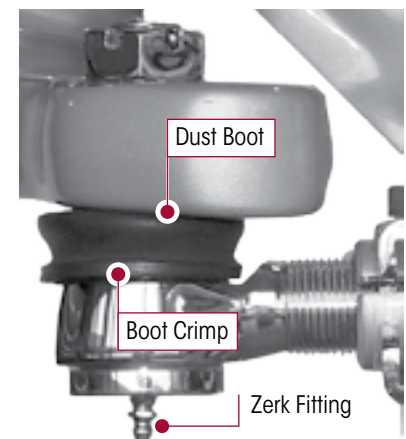

INSPECTION

Prior to performing this inspection procedure, the entire system must be unloaded (i.e., the front end of the vehicle must be raised and supported with safety stands).



DO NOT GREASE THE TIE ROD ASSEMBLY BEFORE PERFORMING THE INSPECTION. DOING SO CAN INHIBIT EFFORTS TO DETERMINE ACTUAL WEAR.



REPLACE THE ENTIRE TIE ROD END IF THE BOOT IS TORN OR MISSING, FAILURE TO DO SO CAN CAUSE PREMATURE WEAR OF THE TIE ROD END.

1. Block rear wheels of vehicle. Using the bottom of the axle beam or the frame rails, raise the front end off the ground and support with safety stands.
2. With the engine off, turn the wheels from full left to full right and then return to the straight-ahead position.
3. Check that the tie rod end boots are in place and completely installed over the tie rod ends.
4. Check for cracking or tears in the boots. Also check the boot seals for damage. Replace the entire tie rod end if the boot is damaged.



THE COTTER PIN MUST BE INSTALLED CORRECTLY THROUGH THE TIE ROD END WITH THE CASTLE NUT TIGHTENED TO THE PROPER TORQUE SPECIFICATION IN ORDER TO SECURELY ATTACH THE TIE ROD. LOSS OF THE COTTER PIN CAN CAUSE THE TIE ROD END NUT TO BECOME LOOSE AND POSSIBLY RESULT IN TOTAL LOSS OF STEERING CONTROL.

5. Check that the tie rod end nut is installed and secured with a cotter pin. If the cotter pin is missing, check the nut torque specification and then install a new cotter pin. Always tighten the castle nut to specified torque when setting the cotter pin. **DO NOT** back off the nut to insert cotter pin.



IT IS CRITICAL TO CHECK THE 5/8" TIE ROD CLAMP BOLT HEAD LOCATION TO VERIFY THE CLAMP FASTENERS HAVE SUFFICIENT CLEARANCE AWAY FROM THE LOWER SHOCK ABSORBER MOUNT AT FULL WHEEL CUT. THE FASTENERS MUST NOT CONTACT THE LOWER SHOCK ABSORBER MOUNT. FAILURE TO DO SO CAN CAUSE ONE OR MORE COMPONENTS TO FAIL CAUSING LOSS OF VEHICLE CONTROL AND POSSIBLE PERSONAL INJURY OR PROPERTY DAMAGE.


6. Verify the 5/8" tie rod clamp bolt head does not contact the lower shock absorber mount at full wheel cut, see Figure 7-4.



THE THREADED PORTION OF THE TIE ROD END MUST EXTEND PAST THE SLOTS INTO THE TIE ROD CROSS TUBE, SEE FIGURE 7-4. FAILURE TO DO SO CAN CAUSE COMPONENT DAMAGE, LOSS OF VEHICLE CONTROL AND POSSIBLE PERSONAL INJURY OR PROPERTY DAMAGE.

7. Check that the tie rod end is threaded correctly into the cross tube and is engaged deeper than the end of the cross tube slot. The tie rod end must be visible the entire length of the cross tube slot, see Figure 7-4.

FIGURE 7-4

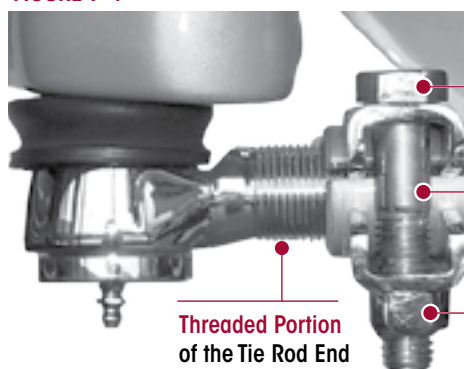

5/8" Tie Rod Clamp Bolt

It is critical to check the 5/8" tie rod clamp bolt head location to verify the clamp fasteners have sufficient clearance away from the lower shock mount at full wheel cut. The fasteners must not contact the lower shock mount.

Tie Rod Cross Tube Slots

It is critical to have the threaded portion of the tie rod end extend past the slots in the tie rod cross tube.

5/8" Tie Rod Clamp Locknut

Tightening Torque
68 ± 7 ft. lbs. (92 ± 9 Nm)

8. Check that grease zerks are installed. Replace a damaged grease zerk with a new one.



DO NOT USE THE FOLLOWING ITEMS OR METHODS TO CHECK FOR MOVEMENT OF THE TIE ROD ASSEMBLY, WHICH CAN CAUSE DAMAGE TO COMPONENTS:

- A CROW BAR, PICKLE FORK OR 2 X 4.



- ANYTHING OTHER THAN HANDS USED TO GRASP AND ROTATE THE CROSS TUBE ASSEMBLY (CAN RESULT IN DAMAGE TO THE CROSS TUBE).
 - EXCESSIVE PRESSURE OR FORCE APPLIED TO THE TIE ROD ENDS OR THE JOINTS OF THE ASSEMBLY.
9. By hand or using a pipe wrench, with jaw protectors to avoid gouging the cross tube, rotate the cross tube toward the front of the vehicle and then toward the rear. After rotating, center the cross tube. If the cross tube will not rotate in either direction, replace both tie rod ends, see Figure 7-5.
 10. Position yourself directly below the tie rod end. Using both hands, grab the assembly end as close to the tie rod end as possible (no more than 6" or 152.4 mm). Apply hand pressure with reasonable human effort vertically up and down in a push-pull motion several times (using approximately 75 ± 25 foot pounds of force). Check for any movement or looseness at both tie rod end locations, see Figure 7-6.

FIGURE 7-5



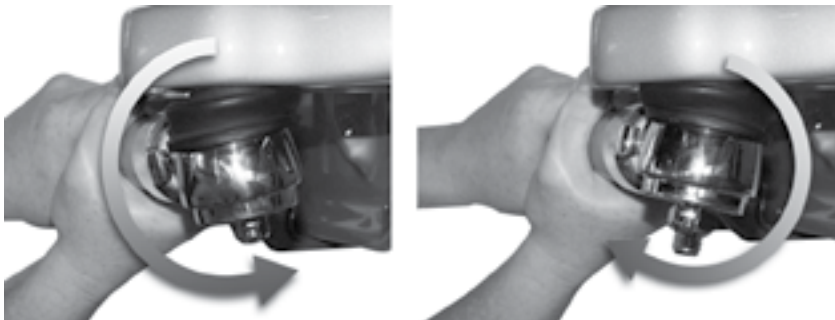


FIGURE 7-6

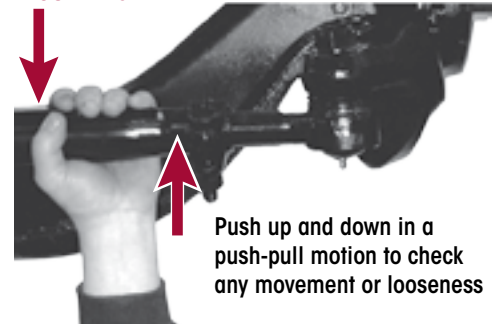

11. If there is any movement in the tie rod assembly, install a magnetic based dial indicator on the tie rod arm, see Figure 7-7.
12. Set the dial indicator to zero.
13. Apply hand pressure with reasonable human effort vertically up and down in a push-pull motion several times (using approximately 75 ± 25 foot pounds of force). Observe the reading on the dial indicator.
14. If the reading is:
 - a. **> 0.060" (1.5 mm)**, replace both tie rod ends at the next service interval.
 - b. **$\geq 0.125"$ (3 mm)** of movement by hand, the vehicle should be removed immediately from use and the tie rod end be replaced.

FIGURE 7-7

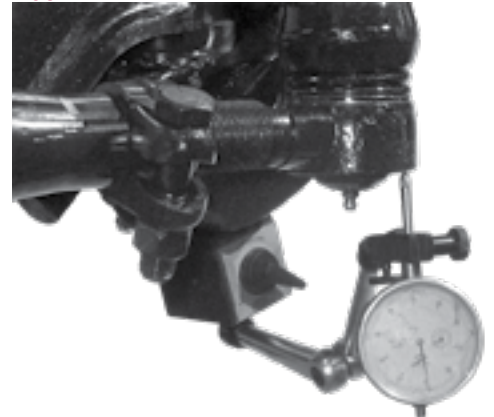

NOTE

According to the Commercial Vehicle Safety Alliance (CVSA), the "out of service" criteria for front steer axle tie rod assemblies on any commercial vehicle is: Any motion other than rotational between any linkage member and its attachment point of more than $\frac{1}{8}"$ (3 mm) measured with hand pressure only. (393.209(d)), (published in the North American Standard Out-of-Service Criteria Handbook, 2022.)

CLAMP GROUP RE-TORQUE INTERVALS



LOOSE OR OVER TORQUED FASTENERS CAN CAUSE COMPONENT DAMAGE, LOSS OF VEHICLE CONTROL, PROPERTY DAMAGE, OR SEVERE PERSONAL INJURY. MAINTAIN CORRECT TORQUE VALUES AT ALL TIMES. CHECK TORQUE VALUES ON A REGULAR BASIS AS SPECIFIED.

1. Clamp group locknuts must be torqued to specification at preparation for delivery and re-torqued at 1,000 miles thereafter, follow the 6 month / 25,000 mile visual inspection and annual re-torque intervals.

WARNING


ENSURE THE CLAMP GROUP IS ALIGNED PROPERLY PRIOR TO TIGHTENING HARDWARE. FAILURE TO DO SO CAN CAUSE LOSS OF VEHICLE CONTROL, PROPERTY DAMAGE, OR PERSONAL INJURY.

2. Ensure that the clamp group is properly aligned and the hex bolts are seated in the axle seat, and the top pad is centered on the leaf spring, see Figure 7-8.

3. Visually inspect for signs of component or bolt movement. If signs of movement are present:

- a. Disassemble the clamp group fasteners, check for component wear or damage and replace as necessary, then install new clamp group fasteners.
- b. Tighten the clamp group hex bolts evenly in 100 foot pounds increments to 600 ± 20 foot pounds torque in the proper pattern to achieve uniform bolt tension, see Figure 7-9.


FIGURE 7-8

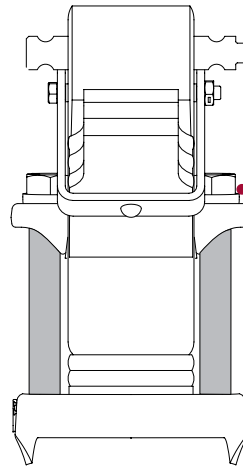

IMPORTANT NOTE
Ensure that Clamp Group Assembly is properly aligned

1" Clamp Group Hex Bolt
Tightening Torque at the Bolt Head
 600 ± 20 ft. lbs.
(814 ± 27 Nm)

FIGURE 7-9

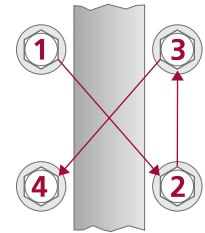

AXLE COLLAR THROUGH BOLTS

WARNING

LOOSE OR OVER TORQUED FASTENERS CAN CAUSE COMPONENT DAMAGE, LOSS OF VEHICLE CONTROL, PROPERTY DAMAGE, OR SEVERE PERSONAL INJURY. MAINTAIN CORRECT TORQUE VALUES AT ALL TIMES. CHECK TORQUE VALUES ON A REGULAR BASIS AS SPECIFIED.

NOTE


A popping noise coming from the steer axle area may indicate loose fasteners. Proceed to the next service facility for a torque inspection to ensure fasteners are tightened to specification.

TORQUE INSPECTION

1. Check the wheels.
2. Tighten the axle collar fasteners at the bolt head evenly in 140 foot pounds increments to 800 ± 20 foot pounds torque, see Figure 7-10.
3. To identify the torque inspection is completed, apply a mark with torque seal to both the axle collar and bolt heads.

FIGURE 7-10

1" x 6.5" Axle Collar Hex Through Bolt
Tightening Torque
 800 ± 20 ft. lbs.
(1084 ± 27 Nm)

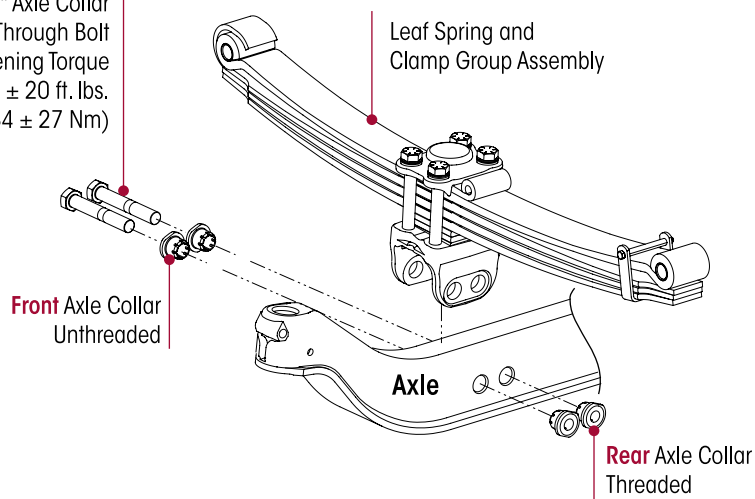

KINGPIN BUSHING

NOTE

If one (1) bushing is worn or damaged, it is mandatory to replace both the top and bottom bushings on that knuckle assembly.

INSPECTING THE STEERING KNUCKLE LATERAL MOVEMENT

1. Chock the wheels to help prevent the vehicle from moving.
2. Set the parking brake.
3. Use a jack to raise the vehicle until the wheels are off the ground. Support the vehicle with safety stands.
4. **CHECKING THE UPPER KINGPIN BUSHING.** Install the base of a dial indicator onto the axle beam and place the tip against the steering knuckle, see Figure 7-11.
5. Set the dial indicator to "0" zero.
6. Move the top and bottom of the tire in and out by applying reasonable constant pressure and then release, see Figure 7-13.
7. Check the reading on the dial indicator. If the dial indicator moves more than 0.015", the upper bushing is worn or damaged. Replace both bushings. Refer to the Kingpin Bushing replacement procedure in the Component Replacement section of this publication.
8. **CHECKING THE LOWER KINGPIN BUSHING.** Install a dial indicator so that the base is on the axle and the indicator tip is against the inside of the bottom of the knuckle, see Figure 7-12.

FIGURE 7-11

Check the **UPPER** Kingpin Bushing

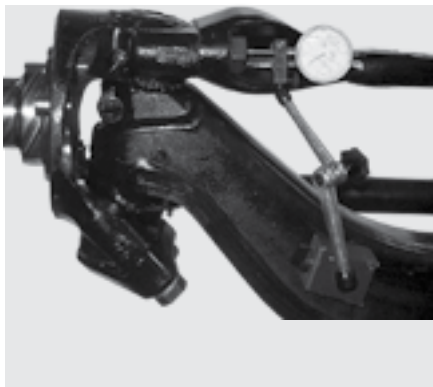


FIGURE 7-12

Check the **LOWER** Kingpin Bushing

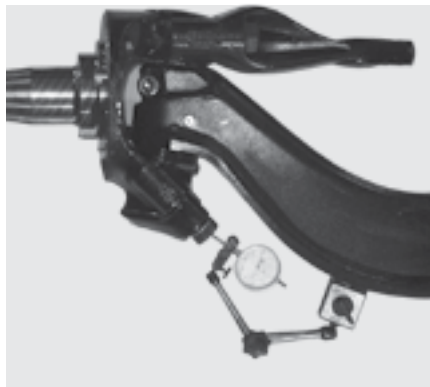


FIGURE 7-13

Move the **TOP and BOTTOM** of the tire in and out



9. Set the dial indicator to "0" zero.
10. Move the bottom of the tire in and out. If the dial indicator moves more than 0.015", the lower bushing is worn or damaged. Replace both kingpin bushings. Refer to the Component Replacement section of this publication.

STEERING KNUCKLE

CHECKING VERTICAL END PLAY (UP AND DOWN MOVEMENT)


The operating specification for vertical end play on the steering knuckle is 0.008" to 0.030".

1. Chock the rear tires to help prevent the vehicle from moving.
2. Set the parking brakes.
3. Use a jack to raise the vehicle until both tires are 1" off the ground.
4. Loosen the kingpin draw keys.

5. Place a dial indicator on each side of the axle as follows:
 - a. Index the wheels slightly (left or right).
 - b. Place the magnetic dial indicator base on the axle, see Figure 7-14.
 - c. Place the tip of the dial indicator on the top of the upper steering knuckle.
6. Set the dial indicator to "0" (zero).
7. Lower the jack.
8. **Upper knuckle adjustment:**
If the vertical end play is:
 - **Greater than 0.030"**, loosen the kingpin draw key nuts and **push down** on the knuckle assembly until the proper vertical end play is achieved.
 - **Less than 0.008"**, loosen the kingpin draw key nuts and **pull up** on the knuckle assembly until the proper vertical end play is achieved.
9. Retighten the kingpin draw key nuts to 188 ± 12 foot pounds torque.
10. Remove wheel chocks.

FIGURE 7-14

Ensure the tip of the dial indicator is on the top of the upper steering knuckle and not on the grease cap

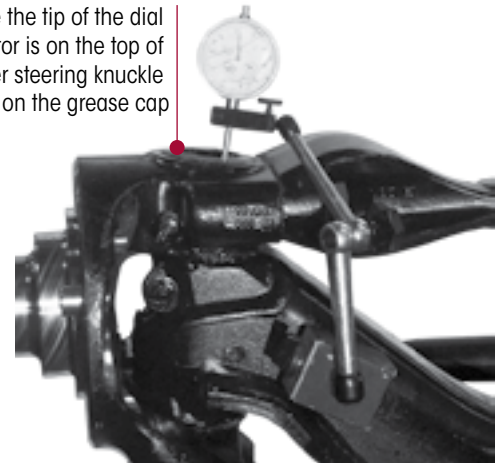

SHOCK ABSORBERS

NOTE

It is not necessary to replace shock absorbers in pairs if only one (1) shock absorber requires replacement.

Hendrickson uses a long service life, premium shock absorber on all STEERTEK NXT High Capacity systems. When the shock absorber replacement is necessary, Hendrickson recommends that the shock absorbers be replaced with identical Hendrickson Genuine parts for servicing. Failure to do so will affect the suspension performance, durability, and will void any applicable warranty. See vehicle manufacturer's applicable publications for other shock absorber inspection requirements.

Inspection of the shock absorber can be performed by doing a heat test, and a visual inspection. Replace as necessary, refer to the Component Replacement section of this publication.

HEAT TEST AND PHYSICAL INSPECTION

1. **Heat Test:** Drive the vehicle with the lift axle down at moderate speeds on a rough road for a minimum of fifteen minutes.

DO NOT GRAB THE SHOCK ABSORBER AS IT COULD POSSIBLY BE HOT AND CAUSE PERSONAL INJURY.

- a. Perform a heat test by carefully touching or placing a hand near the shock absorber body below the dust cover. Touch the frame to get an ambient reference, see Figure 7-15. A shock absorber that is warm to the touch is acceptable, a cold shock absorber should be replaced.
2. **Physical Inspection:** To inspect for an internal failure, remove and shake the suspected shock absorber. Listen for the sound of metal parts rattling inside. The rattling of metal parts can indicate that the shock absorber has an internal failure and the shock absorber should be replaced.

FIGURE 7-15






VISUAL INSPECTION

Look for these potential problems when doing a visual inspection, see Figure 7-16. Inspect the shock absorbers fully extended, replace as necessary.

FIGURE 7-16

SHOCK ABSORBER VISUAL INSPECTION – UNACCEPTABLE CONDITIONS

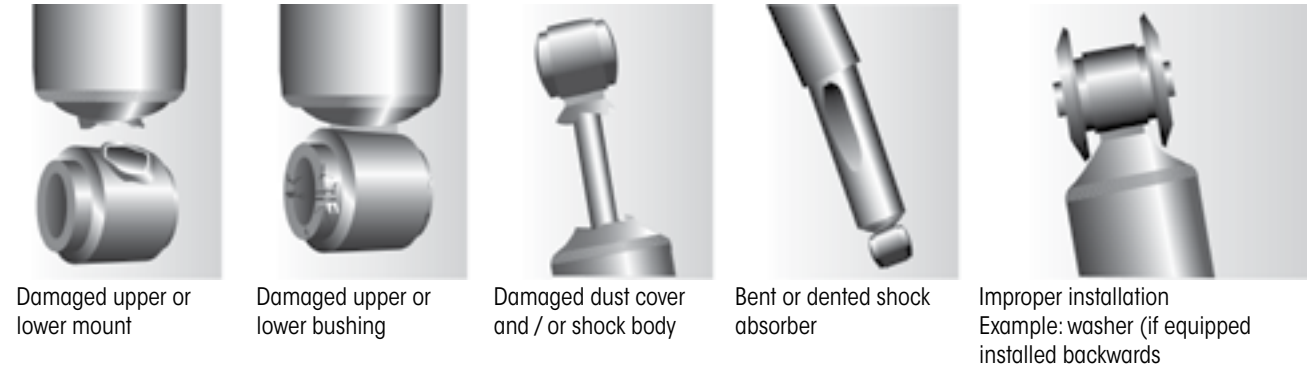


LEAKING VS. MISTING SHOCK ABSORBER VISUAL INSPECTION

The inspection must not be conducted after driving in wet weather or a vehicle wash. The shock absorber needs to be free from water.

Many shock absorbers are often misdiagnosed as failures. Misting is the process whereby very small amounts of shock absorber fluid evaporate at a high operating temperature through the upper seal of the shock absorber. When the “mist” reaches the cooler outside air, it condenses and forms a film on the outside of the shock absorber body. Misting is perfectly normal and necessary function of the shock absorber. The fluid which evaporates through the seal area helps to lubricate and prolong the life of the seal.

FIGURE 7-17

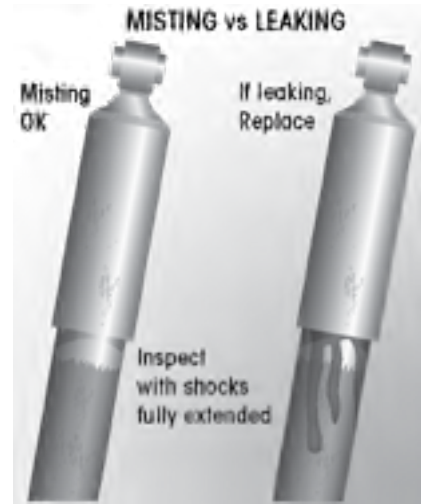

NOTE

STEERTEK NXT High Capacity system is equipped with a premium seal on the shock absorber, however this seal will allow for misting to appear on the shock absorber body (misting is not a leak and is considered acceptable).

Inspect the shock absorber fully extended. **A shock absorber that is truly leaking** will show signs of fluid **leaking in streams from the upper seal**. These streams can easily be seen, see Figure 7-17, underneath the main body (dust cover) of the shock absorber. Replace as necessary.


VISUAL TIRE INSPECTION

The following tire inspection guidelines are based upon Technology & Maintenance Council (TMC) recommended practices. Any issues regarding irregular tire wear where Hendrickson is asked for assistance, will require tire and alignment maintenance records, reference RP 642 in TMC Recommended Practices Manual.

Tire wear is normally the best indicator of vehicle alignment condition. If tires are wearing too rapidly or irregularly, alignment corrections may be needed. The tire wear patterns described below can help isolate specific alignment problems.

The most common conditions of concern for steer tires are: cupping, diagonal wear, feather wear, one-sided wear, overall fast wear (Miles per 32nd), and rapid shoulder wear (one shoulder only).

FIGURE 7-18

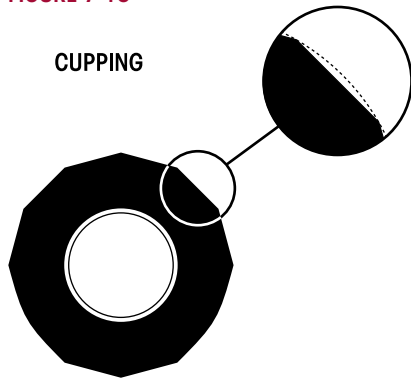

Cupping — Localized, dished out areas of fast wear creating a scalloped appearance around the tire. Cupping, which appears around the tire on the shoulder ribs, may also progress to adjoining ribs.

Cupping is usually a result of moderate-to-severe imbalance, improper rim/wheel mounting, excessive wheel end play or other assembly non-uniformity. It can also be due to lack of shock absorber control on some suspension types as well as loose kingpins.

To solve cupping problems:

Tires – Correct mismatch or balance problem. If ride complaints arise, steer tires may be rotated to drive or trailer axle.

Vehicle – Diagnose component imbalance condition, i.e., wheel, rim, hub, brake, drum. Correct as necessary.

Diagonal Wear — Is localized flat spots worn diagonally across the tread at approximately 25-35° angles, often repeating around the tread circumference.

Diagonal wear is usually caused by bad wheel bearings, toe out, mismounting of the tire and wheel assembly to axle, and mismatched duals for size and/or inflation pressures. It may start as brake skid. Diagonal wear is aggravated by high speed empty or light load hauls.

To correct diagonal wear, reverse direction of rotation of the tire. If wear is excessive, true or retread tire. If the source of trouble is the vehicle, diagnose cause and correct as needed.

FIGURE 7-19

DIAGONAL WEAR


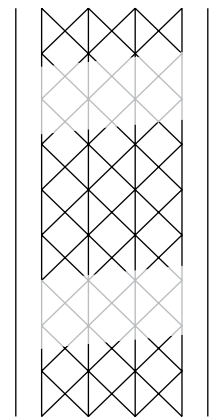


FIGURE 7-20
FEATHER WEAR

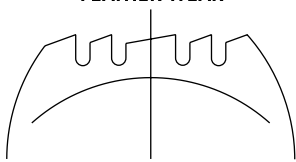

Feather wear — Tread ribs or blocks worn so that one side is higher than the other resulting in step-off across the tread face. Generally, all ribs or blocks exhibit this wear.

To spot this problem do the following: With one hand flat on the tread of the tire and a firm down pressure, slide your hand across the tread of the tire. In

one direction, the tire will feel smooth and in the opposite direction there will be a sharp edge to the tread.

If feather wear on both steer tires is in the same direction, drive axle or other chassis misalignment is indicated. If one steer tire shows feather wear and the other steer tire has normal wear, a combination of toe and drive axle or chassis misalignment is indicated.

One-sided wear — Is excessive wear on one side of tire extending from the shoulder towards the center of the tread.

One-sided wear is usually caused by improper alignment, worn kingpins, loose wheel bearings, excessive negative camber, excessive axle loads, nonparallel axles, or non-uniform tire and wheel assembly caused by improper bead seating or a bent wheel.

To correct one-sided wear:

Tires – Depending on severity, rotate tires to another axle position or, if worn to minimum tread depths, submit for possible retreading.

Vehicle – Diagnose mechanical problem and correct.

FIGURE 7-21

ONE-SIDED WEAR


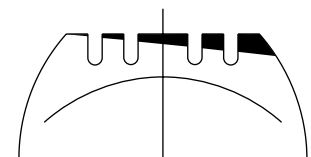




FIGURE 7-22

OVERALL FAST WEAR
(Miles per 32nd)

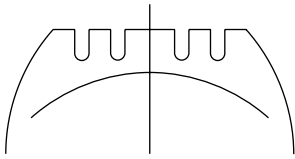

Overall Fast Wear — Fast wear can be described as exhibiting a good, but accelerated wear pattern. It is typically caused by operating conditions, such as mountainous terrain, frequency and severity of turning, abrasive road surfaces in combination with vehicle configurations and their attributes — such as power steering, heavy axle loads, high wheel cuts, setback axles, short wheel base tractors, long wheel base straight trucks. To correct this problem, consult with vehicle and tire manufacturers when specifying equipment or replacing tires.

Rapid Shoulder Wear (one shoulder only) — Is a tire worn on the edge of one shoulder, sometimes extending to inner ribs. It can progress to diagonal wipeout.

This wear condition is usually caused by excessive toe or excessive camber. These conditions can be created by a misaligned or bent axle and can also be caused by loose or worn wheel bearings.


To correct this type of rapid shoulder wear:

Tires – Change direction of rotation of tire. If shoulder wear is severe, remove and retread.

Vehicle – Diagnose misalignment and/or mechanical condition and correct.

FIGURE 7-23


RAPID SHOULDER WEAR
(One Shoulder Only)

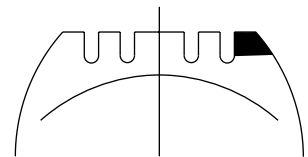

SECTION 8 Alignment & Adjustments

ALIGNMENT DEFINITIONS


FIGURE 8-1

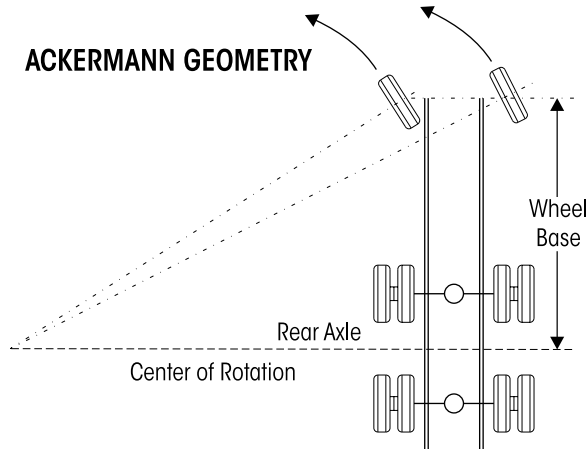

Ackermann Arm (Lower Steering Knuckle) Geometry — The geometry of the four bar linkage consisting of the front axle beam pivot points, tie rod arms, and cross tube attempts to provide free rolling of front tires in a turn. Ackermann geometry is dependent upon the steering axle track-width and wheelbase of the vehicle. Improper geometry results in wheel scrub in turns which generally appears as toe wear on the tire, usually more wear on one side of the vehicle than the other due to the operational route of the vehicle.

Bump Steer (Feedback) — The feedback felt through the steering linkage to the steering wheel when a steer axle tire hits a bump in the road. This occurs because the axle-end of the drag link and the axle attachment point of the spring do not travel in parallel circular arcs as the suspension moves up and down. This condition can also be caused by trapped air in the power steering system.


FIGURE 8-2

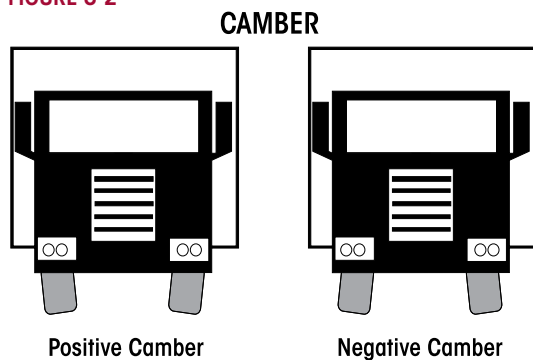

Camber — The angle formed by the inward or outward tilt of the wheel reference to a vertical line. Camber is positive when the wheel is tilted outward at the top and is negative when the wheel is tilted inward at the top.

Excessive positive camber may cause smooth wear on the outer half of the tire tread. Excessive negative camber may cause wear on the inner half of the tread. Static-unloaded camber angles are built into the axle to put the loaded tire perpendicular to the road.


FIGURE 8-3

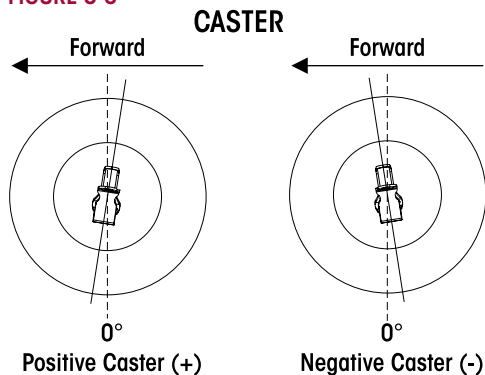

Caster — The forward or rearward tilt of the steering axle kingpin in reference to a vertical line. The angle is measured in degrees. Caster is positive when the top of the steering axis is tilted rearward and is negative when the tilt is forward. Proper caster is important for directional stability and returnability. Too much positive caster can cause shimmy, excessive steering effort and is normally a vehicle performance and handling consideration. Uneven positive caster may create a steering pull toward the side with the lower caster. This attribute may be used to compensate for crowned roads.



FIGURE 8-4

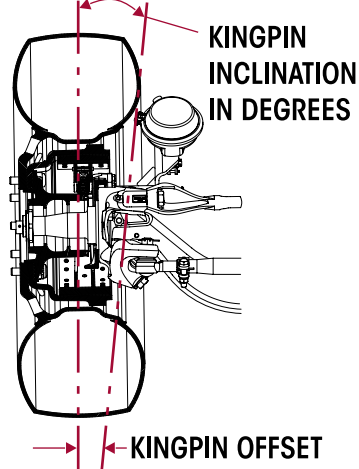

Kingpin Inclination — The inward tilt of the kingpin from the vertical. This front suspension parameter has a pronounced effect on steering effort and returnability. As the front wheels are turned around an inclined kingpin, the front of the truck is lifted. This lifting of the vehicle is experienced as steering effort when the turn is executed and exhibits itself as recovery force when the steering wheel is released.

Kingpin Offset — The distance between the center of the tire patch and intersection of the kingpin axis with the ground. This parameter of front end geometry is important in vehicles without power steering and has a major effect on static steering. If there is no kingpin offset, the tires must scrub around the center of the pin patch when turned in a static condition, resulting in higher static steering efforts.

Steering Arm — The component that connects the drag link to the axle knuckle assembly.

FIGURE 8-5


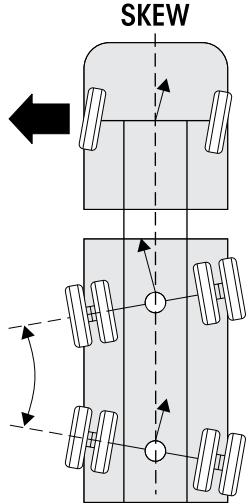



FIGURE 8-6

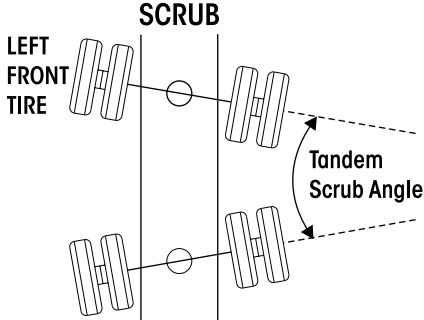

Skew, Scrub, tram angle or parallelism — The angle formed by two thrust or tracking lines of a tandem (or multiple) axle vehicle. As indicated by the term "parallelism", the ideal condition is when the two thrust lines form a 0° angle, or are parallel to each other. Positive skew or tram is when the distance between the right axle ends is less than the distance between the left.

Any scrub angle other than 0° will cause the tandem axles to work against each other. The steer axle must be turned to offset the "push" of the tandem axles to keep the vehicle moving straight ahead. This causes every tire on the vehicle to "scrub". Tire wear from tandem scrubbing occurs at the leading edge of the steer tires in a pattern called "inside / outside" wear, that is, the inside edge of the left steer tire and the outside edge of the right steer tire will exhibit irregular wear for example. Additional tire wear may occur on all tandem axle tires.

FIGURE 8-7

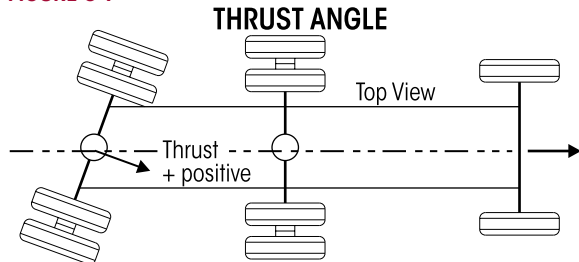


Thrust Angle, Tracking, or Square — The angle formed by the centerline of the vehicle frame (geometric centerline) and the direction that an axle points. As indicated by the term "square", the ideal value for the angle is 0° or when the axle centerline is at 90° or perpendicular to the geometric centerline. Thrust or tracking to the right is positive, and to the left is negative.

A steering correction is required to offset the effect of the thrust angles and keeps the vehicle traveling in a straight line. It results in a lateral offset between the steer and drive axle tires commonly referred to as "dog tracking."

Tie Rod Arm (lower steering knuckle, cross tube arm) — The component that transmits steering forces between left and right axle knuckle assemblies through the cross tube assembly.


FIGURE 8-8

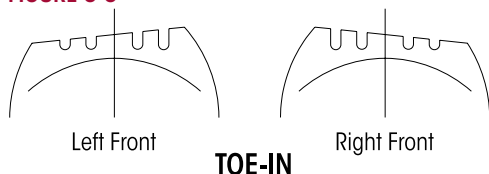

Toe-in — is when the horizontal line intersects in front of the wheels, or the wheels are closer together in front than in the back. Toe-in is commonly designated as positive, toe-out as negative. Excessive toe-in wears the outside edge of the tires. Steer axle toe is adjustable to reduce wear to the leading edge of the tire and also to avoid road wander. Toe is adjusted in a static, unloaded condition so that the tires will run in a straight line under a dynamic, loaded condition.




FIGURE 8-9

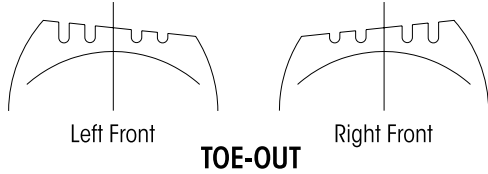

Toe-out — Is when the horizontal lines intersect behind the wheels, or the wheels are closer together in back than in front. Toe-in is commonly designated as positive, toe-out as negative. Excessive toe-out wears the inside edge of the tires. Steer axle toe is adjustable to reduce wear to the leading edge of the tire and also to avoid road wander. Toe is adjusted in a static, unloaded condition so that the tires will run in a straight line under a dynamic, loaded condition.

FIGURE 8-10

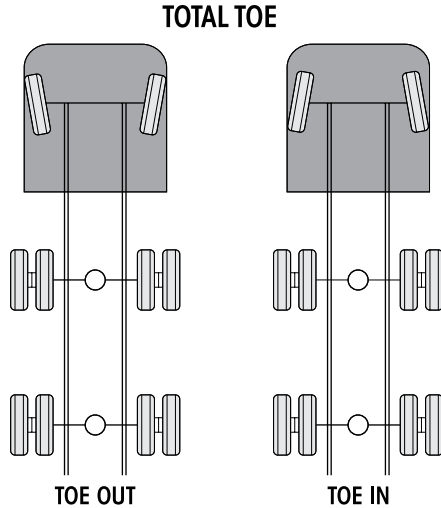

Toe-Out on Turns — (See Ackermann Geometry). Excessive turning angles such as those encountered in pickup and delivery operations may contribute to premature tire wear. Be advised that the greater turning angles, the more that toe and camber change. If you have any doubt regarding the optimum turning angles for your operation, contact the vehicle's manufacturer, axle manufacturer, tire manufacturer and alignment equipment manufacturer for advice.

Total Toe — The angle formed by two horizontal lines through the planes of two wheels. Steer axle toe is adjustable to reduce wear to the leading edge of the tire and also to avoid road wander. Toe is adjusted in a static, unloaded condition so that the tires will run in a straight line under a dynamic, loaded condition.

INSPECTION PRIOR TO ALIGNMENT

WHEELS AND TIRES

Examine the following items:

- The tires are inflated to the manufacturer's specified tire pressure.
- The steer axle tires are the same size and type.
- The lug nuts are tightened to manufacturer's specified torque.
- The wheels are balanced and check for tire to rim runout.
- The wheels and tires are free of excessive wear and damage.
- Wheel bearing end play is within vehicle manufacturer's specification.

FRONT SUSPENSION

Inspect the following:

- All fasteners are installed and tightened to the specified torque, refer to the Torque Specifications section of this publication.
- Leaf springs are free of wear or damage.
- Shock absorbers are free of wear and damage.
- Verify the rear suspension ride height is within specification if equipped with an air suspension. Follow manufacturer's guidelines (if equipped).
- Front and rear spring mounts are free of wear or damage.

TIE ROD ENDS

Perform Tie Rod Inspection procedure; refer to the Preventive Maintenance section of this publication.

REAR AXLE AND REAR SUSPENSION

Rear axle misalignment can cause front tire wear. If the outer edge of one front tire is worn and the



inner edge of the other front tire is worn, check the following:

- Ensure the rear axle is correctly aligned. Refer to the procedure from the vehicle or suspension manufacturer.
- All fasteners, including U-bolts (if applicable) are installed and tightened to the specified torque.
- Ensure the leaf springs are not worn or damaged.
- Ensure the bushings in the leaf springs are not worn or damaged.
- Ensure the torque rods (if used) are correctly adjusted (if adjustable).
- Verify the frame is not bent or twisted.
- Refer to any additional recommendations and specifications from the manufacturer of vehicle on rear axles and suspensions.

FRONT WHEEL ALIGNMENT

Hendrickson recommends technicians review the TMC Guidelines for Total Vehicle Alignment (TMC RP 642).

Check total (front and rear) vehicle wheel alignment when any of the following occurs:

- Every 25,000 to 50,000 miles (40,200 km to 80,500 kms), or 12-18 months (normal maintenance), whichever comes first.
- When the vehicle does not steer correctly.
- To correct a tire wear condition.

For **rear** wheel alignment specifications and adjustment refer to the vehicle manufacturer.

The **front** wheel alignment specifications can be found in the Alignment section of this publication. There are two types of front wheel alignment:

1. **Minor alignment** – a minor front wheel alignment is done **for all** normal maintenance conditions, see below.
2. **Major alignment** – a major alignment is done when uneven or excessive tire wear is evident, or response at the steering wheel is sluggish, or the need for major wheel alignment check and adjustment is required, see below.

MINOR FRONT WHEEL ALIGNMENT

Perform the minor front wheel alignment in the following sequence:

1. Inspect all systems that affect wheel alignment. Refer to Inspection Prior to Alignment in this section.
2. Check the wheel bearing end play.
3. Check and adjust toe if necessary.
4. Check and adjust the vehicle ride height as per vehicle manufacturer.

MAJOR FRONT WHEEL ALIGNMENT

Be certain to follow wheel alignment inspection intervals as specified by the original equipment manufacturer. Before performing a major front wheel alignment it is recommended that alignment equipment calibration be checked to ensure proper vehicle alignment.

Major wheel alignment is accomplished in the following sequence of operation:

1. Inspect all the systems that influence the wheel alignment. Refer to the Inspection Prior to Alignment in this section.
2. Check and adjust the maximum turn angle, refer to the Steering Stop Adjustment Procedure in this section, see Figures 8-11 and 8-12.



FIGURE 8-11



FIGURE 8-12



3. If the vehicle is equipped with power steering, check the pressure relief in the power steering system and reset if necessary. Refer to the vehicle manufacturer regarding the subject: Adjusting the Pressure Relief in the Power Steering System.
4. Check the turning angle. Refer to the original equipment manufacturer specifications.
5. Check the kingpin (or steering axis) inclination. Refer to Kingpin Inclination under Alignment Definitions in this section.




WARNING

AXLE CAMBER AND CASTER ARE NOT ADJUSTABLE. DO NOT CHANGE THE AXLE CAMBER ANGLE, CASTER, OR BEND THE AXLE BEAM. BENDING THE AXLE BEAM TO CHANGE THE CAMBER ANGLE CAN DAMAGE THE AXLE AND REDUCE AXLE STRENGTH, AND WILL VOID HENDRICKSON'S WARRANTY. A BENT AXLE BEAM CAN CAUSE LOSS OF VEHICLE CONTROL, POSSIBLY CAUSING PERSONAL INJURY OR PROPERTY DAMAGE, SEE FIGURE 8-13.

6. Check the camber angle. **DO NOT** attempt to adjust. Refer to Camber in the Alignment Definitions in this section.

FIGURE 8-13

<p>STEERTEK NXT Vocational Steer Axle System</p> <p>This article is covered by at least one or more of the U.S. and/or foreign patents and/or pending U.S. and/or foreign patent applications posted at: www.hendrickson-intl.com/patents</p> <p>HENDRICKSON Truck Commercial Vehicle Systems www.hendrickson-intl.com 1.866.755.5968</p>	<p>WARNING</p> <p>UNAUTHORIZED WELDING OR MODIFICATIONS can cause cracks or other axle structural damage and result in loss of vehicle control, severe personal injury or death.</p> <p>■ Do not bend, weld or modify axle without authorization from Hendrickson Truck Commercial Vehicle Systems.</p> <p style="font-size: small;">© 2016 Hendrickson USA, L.L.C. All Rights Reserved Part No. 60905-043 A</p>
---	---

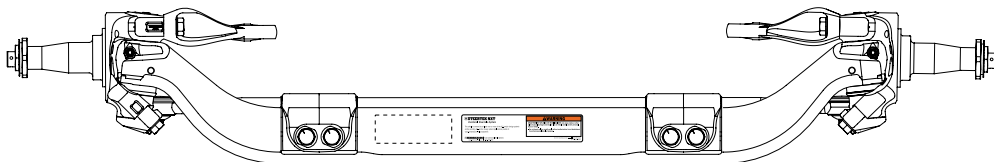

SERVICE HINT

Ensure the rear air suspension (if equipped) ride height is within specification prior to performing a caster measurement or adjustment. The rear ride height must be correct to achieve proper caster.

7. Check caster angle and cross caster (both the caster angle and cross caster are non-adjustable). Refer to Caster in the Alignment Definitions in this section. Cross caster is the difference between the caster readings for left and right side of the vehicle.
8. Check and adjust toe-in, refer to Toe Setting in this section.

STEERING STOP

ADJUSTMENT PROCEDURE

NOTE

When the axle or lower steering knuckle is replaced, the steering stop adjustment must be checked.


INSPECTION

Inspect the steering axle stop bolt threads for threadlocker, if none is present, apply Loctite 242 or equivalent on the bolt threads prior to tightening.

ADJUSTMENT PROCEDURE

1. Drive the vehicle on turntables and chock the rear wheels.
2. Measure the wheel cut. The wheel cut is determined by the steering the tires. Wheel cut is measured at the inside wheel only, therefore the tires must be turned to the full lock position for each **right and left hand** direction. Refer to the vehicle manufacturer for exact specifications.

FIGURE 8-14

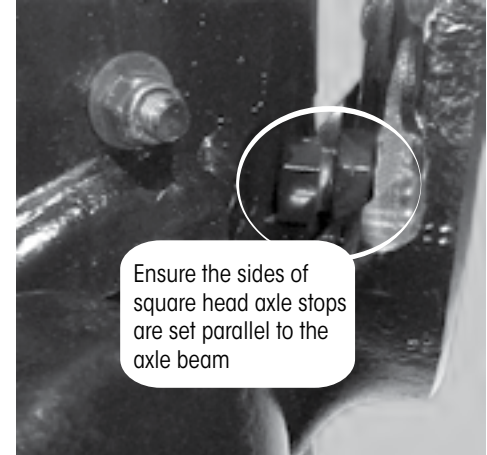

NOTE

It is important that the sides of the square head axle stops are set parallel to the axle beam to ensure a good contact point on the axle, see Figure 8-14.

3. **Increase** the wheel cut:
 - a. Loosen the jam nuts and screw the axle stop set screw in (**clockwise**).
 - b. Tighten the jam nuts to 50 ± 10 foot pounds torque.

WARNING

ALWAYS CHECK/RESET THE STEERING GEAR BOX POPPET WHEN THE WHEEL CUT IS DECREASED. FOLLOW MANUFACTURER'S GUIDELINES FOR THE GEAR BOX POPPET RESETTING PROCEDURE. FAILURE TO DO SO CAN RESULT IN PREMATURE FAILURE OF THE AXLE OR STEERING KNUCKLE. THIS CONDITION CAN CAUSE LOSS OF VEHICLE CONTROL, POSSIBLE PERSONAL INJURY OR PROPERTY DAMAGE AND VOID ANY APPLICABLE WARRANTY.

4. **Decrease** the wheel cut:
 - a. Loosen the jam nuts and screw the axle stop set screw out (**counter-clockwise**).
 - b. Tighten the jam nuts to 50 ± 10 foot pounds torque.
5. Measure the wheel cut and check for any interference with the related steering components.

TOE SETTING

1. Place the vehicle on a level floor with the wheels in a straight ahead position.
2. Raise the vehicle and support the front axle with safety stands.
3. Chock the rear wheels of the vehicle.
4. Use paint and mark the center area of tread on both steer axle tires around the complete outer diameter of the tires.
5. Scribe a line through both steer axle tires in the painted area around the complete outer diameter of the tires.
6. Raise the vehicle and remove the safety stands.
7. Set the vehicle on the ground.

NOTE


DO NOT measure toe-in with the front axle off the ground. The weight of the vehicle must be on the front axle when toe-in is measured.




8. Use a trammel bar and measure the distance between the scribe marks at the rear of the steer axle tires. Record the measurement.
9. Install the trammel bar and measure the distance between the scribe marks at the front of the steer axle tires. Record the measurement, see Figure 8-15.

NOTE

When setting up the trammel bar the pointers should be level with the spindles at the front and rear of the steer axle tires.

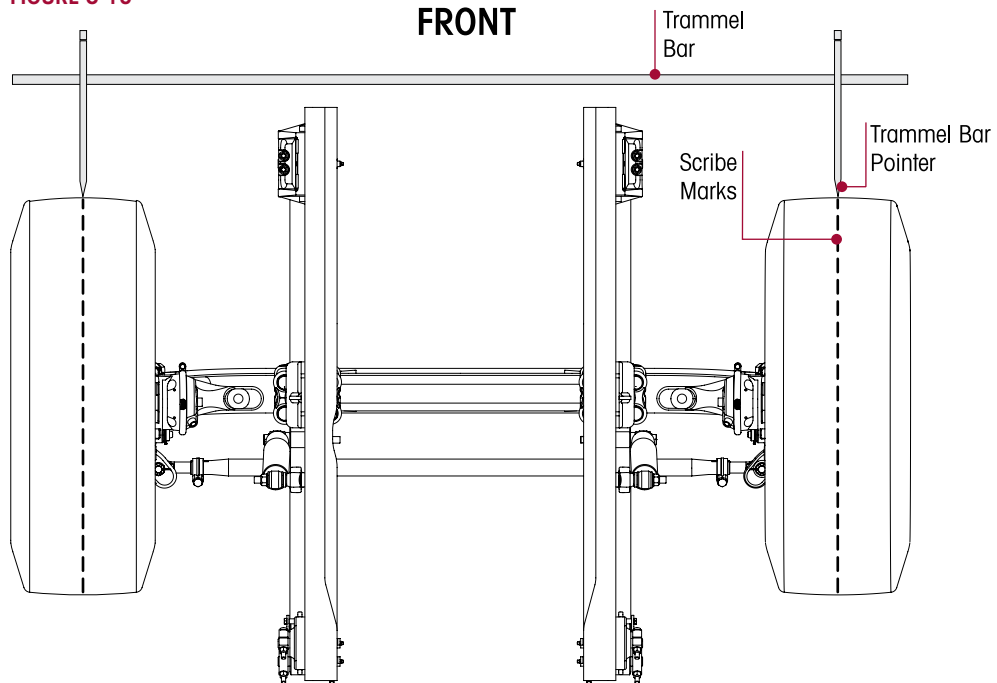FIGURE 8-15

10. To calculate the toe setting subtract the front measurement from the rear measurement, the difference between the two will equal the toe-in/toe-out measurement.
11. If the toe measurement is not within the specifications of $\frac{1}{16}'' \pm \frac{1}{32}''$ ($0.060'' \pm 0.030''$), it will be necessary to adjust the toe setting. Refer to the following procedure.
 - a. Loosen the tie rod cross tube clamp bolts and locknuts.
 - b. Turn the tie rod cross tube until the specified toe-in distance is achieved.
 - c. Tighten the bolt and locknut on the tie rod cross tube to $\mathfrak{R} 68 \pm 7$ foot pounds torque.

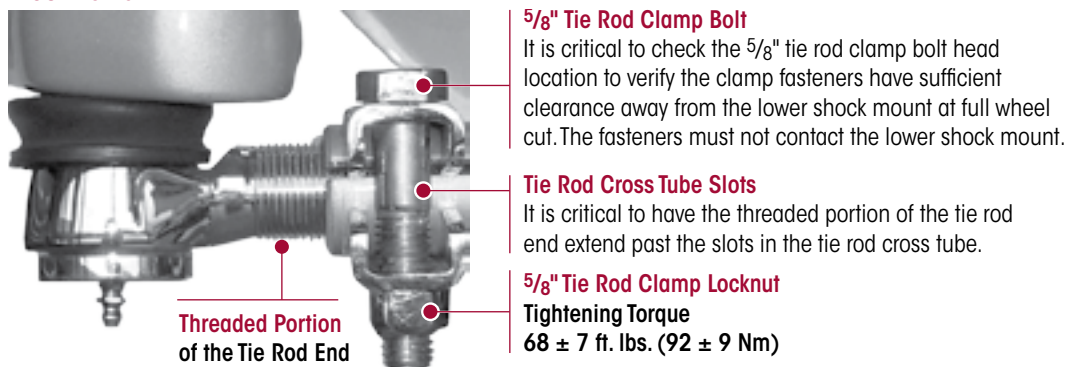FIGURE 8-16



⚠ WARNING

THE THREADED PORTION OF THE TIE ROD END MUST EXTEND PAST THE SLOTS INTO THE TIE ROD (SEE FIGURE 8-16) IT IS CRITICAL TO CHECK THE 5/8" TIE ROD CLAMP BOLT HEAD LOCATION TO VERIFY THE CLAMP FASTENERS HAVE SUFFICIENT CLEARANCE AWAY FROM THE LOWER SHOCK MOUNT AT FULL WHEEL CUT. THE FASTENERS MUST NOT CONTACT THE LOWER SHOCK MOUNT. FAILURE TO DO SO CAN CAUSE ONE OR MORE COMPONENTS TO FAIL CAUSING LOSS OF VEHICLE CONTROL AND POSSIBLE PERSONAL INJURY OR PROPERTY DAMAGE.

12. Verify the 5/8" tie rod clamp bolt head does not contact the lower shock mount at full wheel cut, see Figure 8-16.
13. Repeat Steps 1-10 until the correct toe setting is achieved.
14. Remove the vehicle frame safety stands and lower the vehicle.
15. Remove the rear wheel chocks.



SECTION 9 Component Replacement

FASTENERS

Hendrickson recommends that when servicing the vehicle to replace the removed fasteners with new equivalent fasteners. Maintain the correct torque values at all times. Check the torque values as specified. See Hendrickson's Torque Specifications section of this publication. If non-Hendrickson fasteners are used, follow the torque specifications listed in the vehicle manufacturer's service manual.

SHOCK ABSORBERS

NOTE

It is not necessary to replace the shock absorbers in pairs if only one (1) shock absorber requires replacement.




WARNING

THE SHOCK ABSORBERS ARE THE REBOUND TRAVEL STOPS FOR THE SPRINGS. ANYTIME THE FRONT AXLE ON THE SUSPENSION IS SUSPENDED IT IS MANDATORY THAT THE SHOCK ABSORBERS REMAIN CONNECTED. FAILURE TO DO SO COULD CAUSE THE LEAF SPRINGS TO EXCEED THEIR MAXIMUM LENGTH, OR CAUSE A REVERSE ARCH IN THE STEEL LEAF SPRINGS, POSSIBLY RESULTING IN PREMATURE STEEL LEAF SPRING FAILURE.

DISASSEMBLY

1. Place the vehicle on a level floor.
2. Chock the wheels.
3. Remove the lower mounting bolts, fasteners, and spacer.
4. Remove the upper mounting bolts and fasteners.
5. Slide out the shock absorber.
6. Inspect the shock absorber mounting brackets and hardware for damage or wear, replace as necessary.

FIGURE 9-1

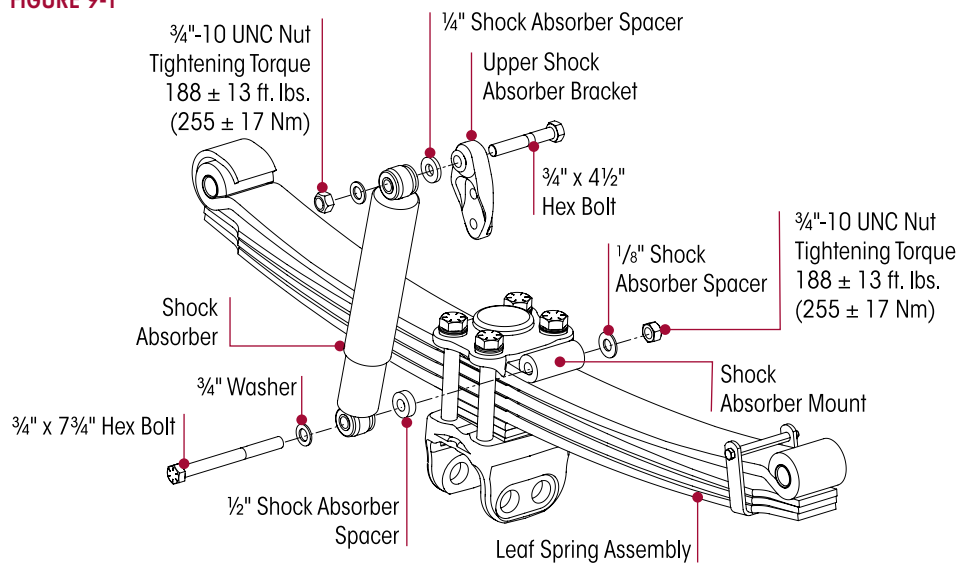

ASSEMBLY

1. Install the upper inboard shock absorber spacer, shock absorber and fasteners into the upper shock absorber bracket, see Figure 9-1. Snug fasteners, **DO NOT** tighten at this time.
2. Install the lower bolt from the outboard side of the leaf spring shock absorber mount and attach the washer, outboard spacer, inboard spacer and locknut, see Figure 9-1.


3. Tighten the upper and lower shock absorber eye locknuts to \mathbb{R} 188 ± 13 foot pounds torque.
4. Remove the wheel chocks.

FRONT LEAF SPRING FRAME HANGER

DISASSEMBLY

1. Place the vehicle on level floor.
2. Chock the wheels.
3. Raise the frame and support the vehicle with safety stands.
4. Support the front axle with a floor jack.
5. Remove the lower shock absorber mounting fasteners.
6. Remove the bottom cap fasteners from the opposite side frame hanger / threaded pin connection.
7. Remove the bottom cap and fasteners from the hanger being replaced, see Figure 9-2.
8. Lower the floor jack until the spring eye / threaded pin clears the front frame hanger legs.
9. Remove the frame mounting fasteners from the hanger per manufacturer's guidelines.
10. Remove the front leaf spring frame hanger from the vehicle.
11. Inspect the front leaf spring frame hanger for excessive wear or damage and replace if necessary.

FIGURE 9-2

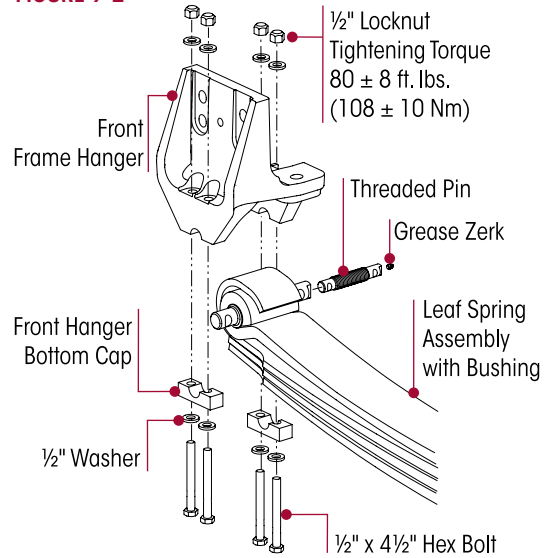

ASSEMBLY

1. Install the new leaf spring hanger on the frame.
2. Install new frame fasteners per vehicle manufacturer's guidelines.
3. Raise the axle into the front hanger until the spring eye / threaded pin connects the front frame hanger legs.
4. Install the front hanger bottom cap and fasteners.
5. Tighten the 1/2" locknut to \mathbb{R} 80 ± 8 foot pounds torque, see Figure 9-2.
6. Install the lower shock absorber mounting fasteners, refer to Shock Absorbers in this section.
7. Remove the safety stands and lower frame.
8. Remove the wheel chocks.

REAR LEAF SPRING FRAME HANGER


DISASSEMBLY

1. Place the vehicle on level floor.
2. Chock the rear wheels.
3. Raise the frame and support the vehicle with safety stands.
4. Remove wheel assemblies per the vehicle manufacturer's instructions.
5. Support the front axle with a floor jack.
6. Remove and discard the lower shock absorber mounting fasteners.
7. Remove and discard the 1/2" shackle fasteners from the frame hanger and leaf spring assembly.
8. Remove the shackle brackets and inspect for damage, replace as necessary.



9. Lower the floor jack until the spring eye / threaded pin clears the rear frame hanger.
10. Remove the threaded pins and inspect for damage, replace as necessary.
11. Remove the frame mounting fasteners from the hanger per vehicle manufacturer's guidelines.
12. Remove the rear hanger assembly from the vehicle.

FIGURE 9-3

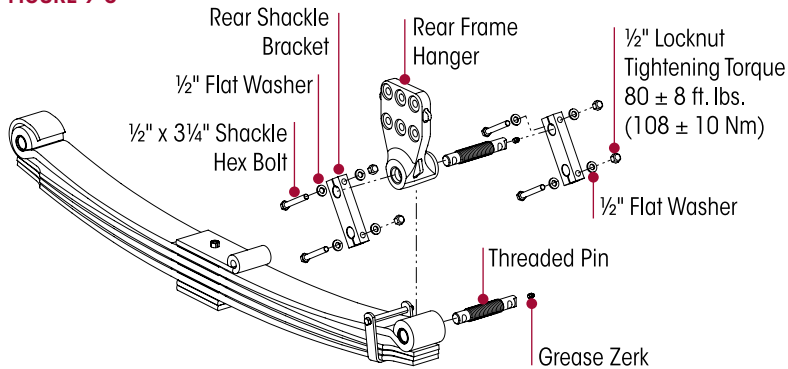

ASSEMBLY

1. Install the rear hanger assembly on the frame. Install the frame to frame rail fasteners per vehicle manufacturer's guidelines.
2. Pre-lubricate the threaded pins with lithium base grease and install the upper threaded pin into the rear frame hanger and the rear leaf spring pin in the spring eye.
3. Raise the floor jack until the rear of the leaf spring assembly spring eye is aligned with the lower shackle bracket holes.
4. Install the shackle brackets on the both sides of the rear spring hanger.
5. Install the 1/2" upper and lower shackle fasteners and tighten to 80 ± 8 foot pounds torque, see Figure 9-3.
6. Install the lower shock absorber into the lower shock bracket.
7. Install the 3/4" shock absorber fasteners and tighten to 188 ± 13 foot pounds.
8. Install the wheel assemblies per the vehicle manufacturer's instructions.
9. Raise the vehicle and remove the frame safety stands and lower the frame.
10. Remove the rear wheel chocks.

LEAF SPRING AND CLAMP GROUP ASSEMBLY – MODULE

NOTE

The various leaf spring and clamp group assemblies are sold as a module in the aftermarket and as individual components. The following instructions are to remove and install the module as a unit from the axle. It is also a preliminary procedure to remove the module to service the assemblies' individual components, refer to your specific STEERTEK NXT High Capacity system parts list for your make of vehicle, available online at: www.hendrickson-intl.com/Truck/Fire-Rescue/STEERTEK-NXT-Fire.

You will need:

- Soft jaw vice.
- Axle collar driver, refer to the Special Tools section of this publication.

REMOVAL FROM AXLE

NOTE


The removal of the leaf spring and clamp group assembly from the axle is done **one side at a time** while the other side remains clamped to the axle to prevent axle movement during service.

1. Place the vehicle on a level floor.



2. Chock the wheels.
3. Raise the vehicle and support the vehicle with safety stands.
4. Suspend the front axle to remove the load from leaf spring assembly.
5. Remove the tires per the vehicle manufacturer's instructions.
6. Support the axle with a floor jack.
7. Remove and discard the **lower** shock absorber fasteners. Remove the shock absorber spacers.
8. Loosen the front hanger bottom cap fasteners **on the side being serviced**, see Figure 9-4. **DO NOT** remove at this time.
9. Remove the rear shackles fasteners and shackles from **both** leaf springs assemblies to disconnect the rear shackles, see Figure 9-4.
10. Partially remove the axle collar bolts and leave a couple of threads engaged, see Figure 9-5.
11. Strike the bolt heads with a hammer to dislodge and drive out the rear collars.
12. Install the collar bushing driver from the rear of the axle, see Figure 9-6.
13. Strike the bushing driver to dislodge and drive out the front axle collars, Figure 9-7, until the front axle collars are clear from the axle, see Figure 9-8.
14. **Lower the axle** until there is sufficient clearance to remove the leaf spring and clamp group assembly on the side being serviced from the axle.

FIGURE 9-4

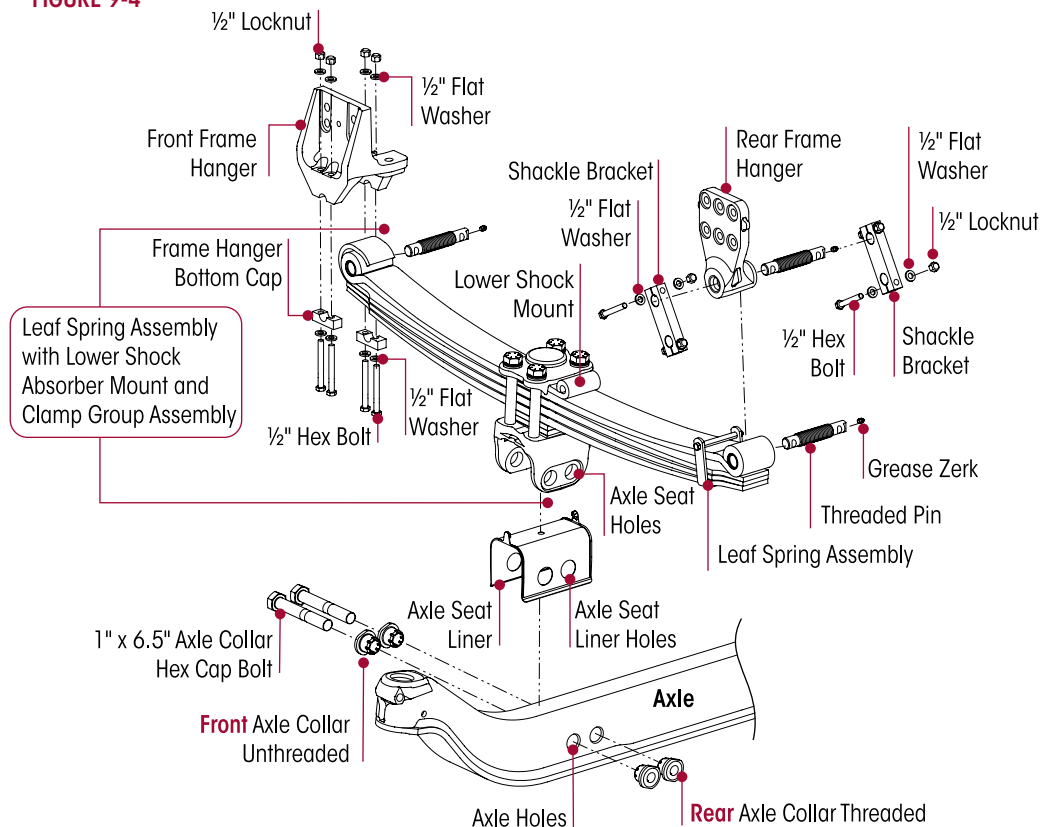

15. **On the side being serviced**, remove and discard the front hanger bottom cap fasteners. Remove the front hanger bottom caps.



WARNING

THE WEIGHT OF THE LEAF SPRING AND CLAMP GROUP ASSEMBLY IS APPROXIMATELY 230 POUNDS. CARE SHOULD BE TAKEN AT REMOVAL AND INSTALLATION TO PREVENT PERSONAL INJURY OR DAMAGE TO COMPONENTS.

16. Remove the leaf spring and clamp group assembly from the axle.
17. Inspect the rear shackles and threaded pins for damage, replace as necessary.



FIGURE 9-5

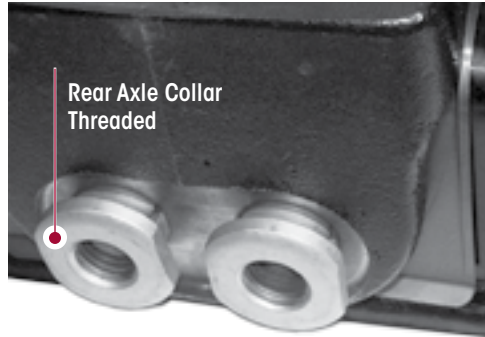


FIGURE 9-6


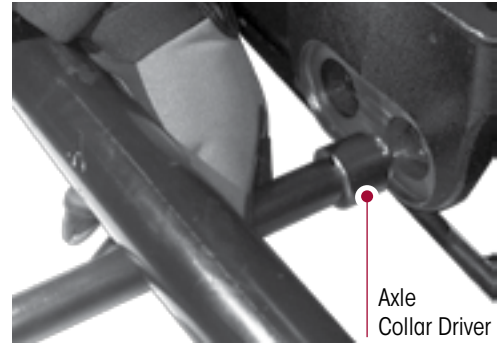


FIGURE 9-7



Strike from the rear of the axle to remove front axle non threaded collar

FIGURE 9-8

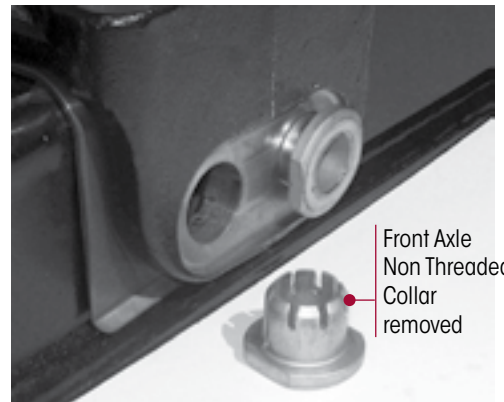

ASSEMBLY



WARNING

WHEN PLACING THE LEAF SPRING AND CLAMP GROUP ASSEMBLY IN A VISE IT IS NECESSARY TO PROTECT THE MACHINED SURFACES FROM GOUGES OR MARRING BY USING BRASS JAWS (SOFT JAWS) SEE FIGURE 9-9. FAILURE TO DO SO CAN CAUSE PREMATURE PART DAMAGE, DAMAGE TO THE LEAF SPRING AND CLAMP GROUP ASSEMBLY, LOSS OF WARRANTY, LOSS OF VEHICLE CONTROL, CAUSING PERSONAL INJURY OR PROPERTY DAMAGE.

SERVICE HINT

It is acceptable to mount the leaf spring and clamp group components in a soft jaw vise or work bench when performing the following tightening procedure.

1. On the side being serviced, pre-lubricate the threaded pins with lithium base grease and install into the lower rear leaf spring eye and into the rear hanger.
2. Secure the leaf spring and clamp group assembly in a suitable holding device, such as a vise with brass jaws (soft jaws) or on a workbench, see Figures 9-9 and 9-10.
3. Ensure the clamp group hex bolts are tightened to \mathbb{R} 600 ± 20 foot pounds torque in 100 pound increments in the proper pattern to achieve uniform bolt tension, see Figure 9-11.

FIGURE 9-9


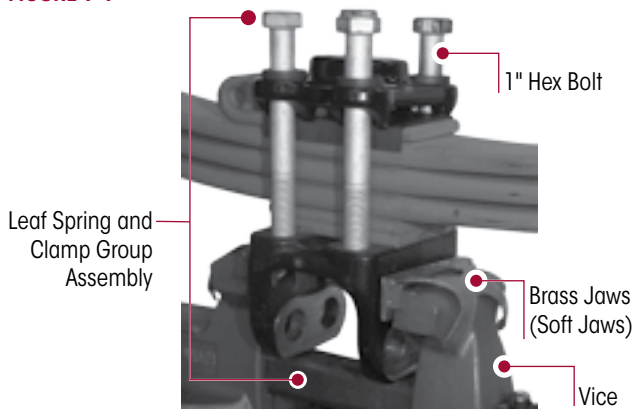


FIGURE 9-10



FIGURE 9-11

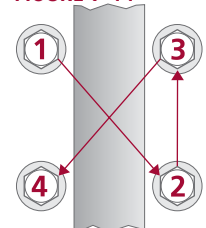


WARNING

4. Install the new axle seat liner under the axle seat (liner ear snap to side of axle seat), see Figure 9-12.

THE WEIGHT OF THE LEAF SPRING AND CLAMP GROUP ASSEMBLY IS APPROXIMATELY 230 POUNDS. CARE SHOULD BE TAKEN AT REMOVAL AND INSTALLATION TO PREVENT PERSONAL INJURY OR DAMAGE TO COMPONENTS.


5. Install the new leaf spring and clamp group assembly (approximate weight 230 pounds) on the axle. Ensure the axle seat liner holes are lined up with the axle seat and axle holes, see Figures 9-12.

FIGURE 9-12

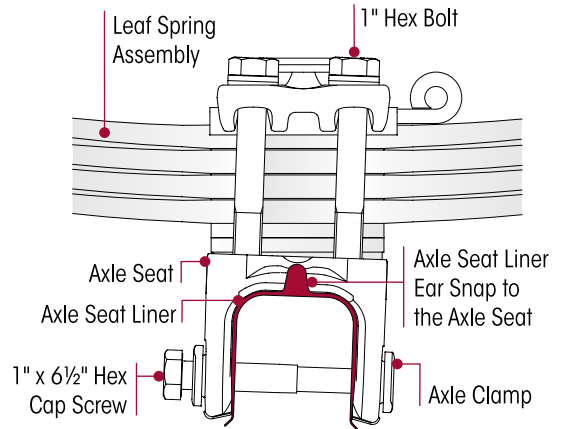

6. Install the non-threaded collars at the **FRONT** of the axle and the threaded collars at the **REAR** of the axle going into the axle seat, axle seat liner and axle. Tap into place with a mallet, see Figure 9-13.

FIGURE 9-13

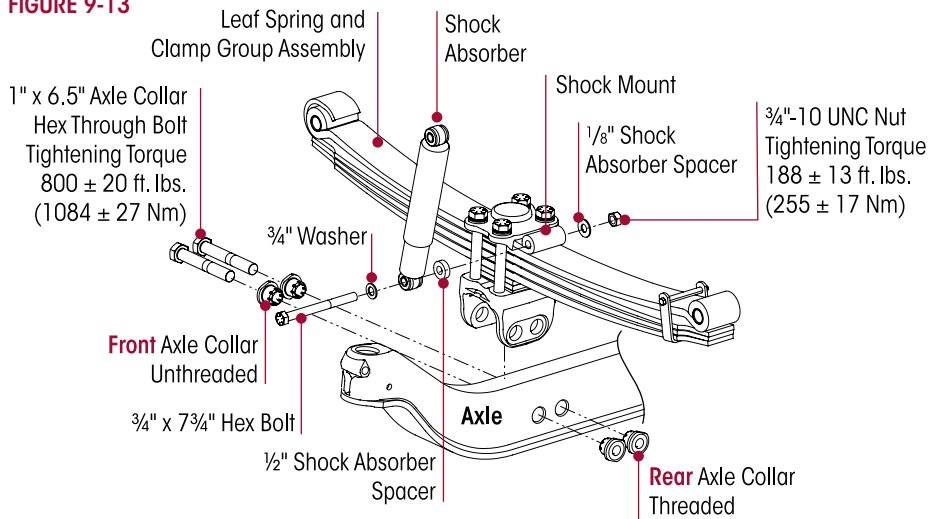

7. Install the axle collar bolts with the bolt head located on the **FRONT** side of the axle and snug fastener. **DO NOT** tighten to torque at this time.
8. Raise the axle.
9. Install the axle and leaf spring assembly into the front hanger and rear shackle assembly.
10. Install the spring hanger clamps, front hanger bottom cap and fasteners, refer to Front Leaf Spring Frame Hanger in this section.
11. Install the rear shackles and fasteners and tighten fasteners to $\boxed{80} \pm 8$ foot pounds torque.
12. Raise the axle and the leaf spring clamp group assembly.
13. Install the lower shock absorber bolt from the outboard side of the leaf spring shock absorber mount. Install the outboard spacer, inboard spacer and locknut and tighten fasteners to $\boxed{188} \pm 13$ foot pounds torque, see Figure 9-1.
14. Tighten both sides, left and right of the axle collar bolts in four stages, (stage one: 100 foot pounds), (stage two: 350 foot pounds), (stage three 700 foot pounds) and (stage four: $\boxed{800} \pm 20$ foot pounds final torque), see Figure 9-13.
15. Raise the vehicle.
16. Install the tires per the vehicle manufacturer's specifications.
17. Remove the safety stands and load the front axle with the vehicle weight.
18. Remove the wheel chocks.

LEAF SPRING & CLAMP GROUP ASSEMBLY – INDIVIDUAL COMPONENTS

These leaf spring and clamp group assembly instructions can be used to replace individual components shown in Figure 9-14.


You will need:

- Soft Jaw Vice

DISASSEMBLY

1. Remove the Leaf Spring and Clamp Group Assembly per instructions in this section.
2. Prior to removal of hex bolts, refer to Table 9-1 on page 39 to determine if hex bolts are equipped with washers or not to aid in assembly.
3. Remove and discard the four (4) 1" hex bolts.
4. Remove the top pad with jounce stop.
5. Remove and discard all plastic leaf spring liners.
6. Remove the leaf spring assembly.
7. Prior to removal of caster wedge, note the location and orientation, see Figure 9-14. Remove the caster wedge.
8. Prior to removal of spring spacer, note the location and orientation, see Figure 9-14. Remove the spring spacer.
9. Inspect all clamp group components for any damage, replace as necessary.

FIGURE 9-14

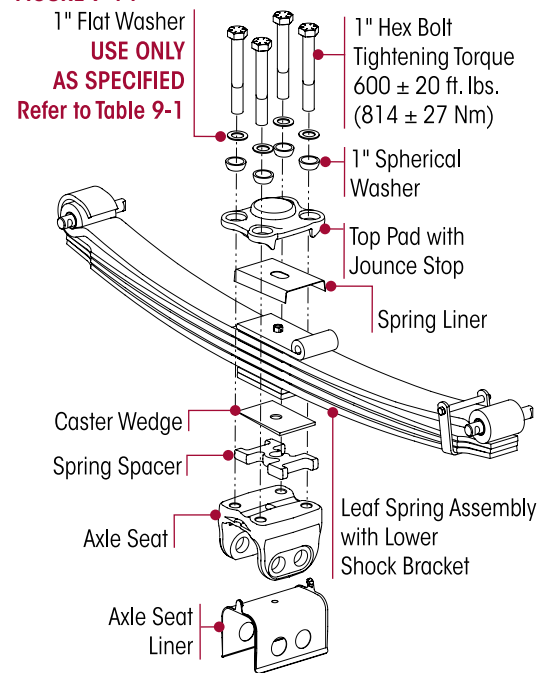

ASSEMBLY

1. Install caster wedge in same location and orientation as removed, see Figure 9-14.
2. Install the leaf spring onto the spring spacer.
3. Install new spring liner onto leaf spring assembly.
4. Install the top pad with jounce stop on top of leaf spring liner.



WARNING

USE 1" FLAT WASHERS (PART NO. 22962-051) ONLY AS SPECIFIED IN TABLE 9-1 ON PAGE 39 (LEAF SPRING AND CLAMP GROUP ASSEMBLY). THE TABLE LISTS DIFFERENT CONFIGURATIONS FOR THIS ASSEMBLY. FOR CERTAIN CONFIGURATIONS THE CLAMP GROUP REQUIRES THE USE OF 1" FLAT WASHERS (PART NO. 22962-051) WITH THE SPECIFIED 1" HEX BOLT LENGTH, BUT NOT IN OTHER CONFIGURATION. IMPROPER CLAMP FORCE IN THE LEAF SPRING AND CLAMP GROUP ASSEMBLY, IMPROPER SEATING AND COMPONENT DAMAGE CAN CAUSE LOSS OF VEHICLE CONTROL, ADVERSE VEHICLE HANDLING, PROPERTY DAMAGE AND PERSONAL INJURY.

5. Install the hex bolts and washers as noted prior to disassembly (refer to Table 9-1 on page 39) into the holes on the top pad, see Figure 9-14, and hand tighten. **DO NOT** tighten to torque at this time.



WARNING

WHEN PLACING THE LEAF SPRING AND CLAMP GROUP ASSEMBLY IN A VISE IT IS NECESSARY TO PROTECT THE MACHINED SURFACES FROM GOUGES OR MARRING BY USING BRASS JAWS (SOFT JAWS) SEE FIGURE 9-15. FAILURE TO DO SO CAN CAUSE PREMATURE PART DAMAGE, DAMAGE TO THE LEAF SPRING AND CLAMP GROUP ASSEMBLY, LOSS OF WARRANTY, LOSS OF VEHICLE CONTROL, CAUSING PERSONAL INJURY OR PROPERTY DAMAGE.

SERVICE HINT

It is acceptable to mount the leaf spring and clamp group components in a soft jaw vise when performing the tightening procedure.



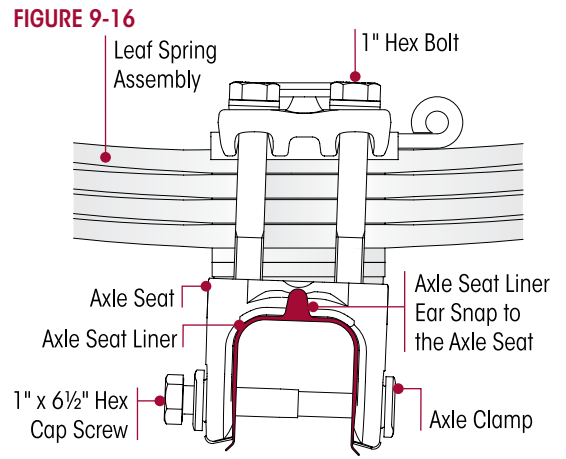


FIGURE 9-17

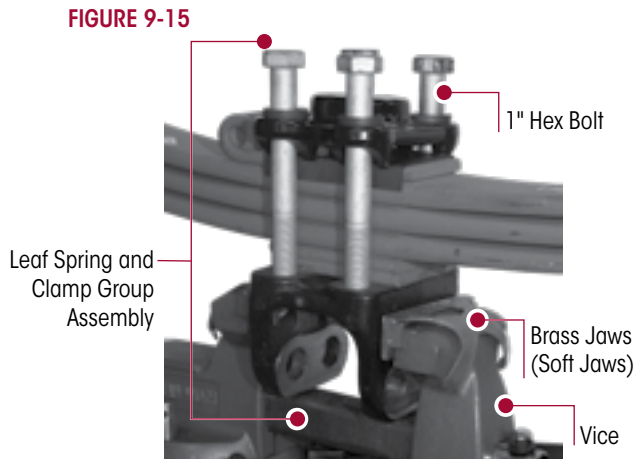

6. Secure the leaf spring and clamp group assembly in a suitable holding device, such as a soft jaw vise, see Figure 9-15.
7. Ensure that the clamp group is properly aligned and the top pad is centered on the leaf spring.
8. Tighten the clamp assembly hex bolts evenly in 100 foot pounds increments to 600 ± 20 foot pounds torque in the proper pattern to achieve uniform bolt tension, see Figure 9-17.
9. Install the new axle seat liner under the axle seat (liner tabs snap to the sides of axle seat), see Figure 9-16.

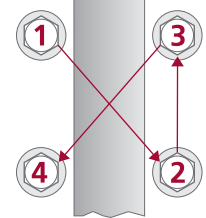

WARNING

THE WEIGHT OF THE LEAF SPRING AND CLAMP GROUP ASSEMBLY IS APPROXIMATELY 230 POUNDS. CARE SHOULD BE TAKEN AT REMOVAL AND INSTALLATION TO PREVENT PERSONAL INJURY OR DAMAGE TO COMPONENTS.

10. Install the new leaf spring and clamp group assembly (approximate weight 230 pounds) on the axle per the Leaf Spring and Clamp Group Assembly instructions in this section.



TABLE 9-1

***Leaf Spring Assembly and Components**

Capacity	Ride Height	Leaf Spring & Clamp Group Assembly	Clamp Group Service Kit	Leaf Spring Assembly	1" Hex Bolt		1" Flat Washer (USE ONLY AS SPECIFIED)	Leaf Spring Spacer	
					Length	Part No.		Thickness	Part No.
FERRARA									
18K	8"	91843-001	34013-278	82378-150	7"	64107-002	Not Required	---	---
	9"	91843-002	34013-397		8"	64107-001		1"	79814-000
	10"	91843-003	34013-312		9"	64107-003		---	---
20K	8"	91843-101	34013-278	82379-150	7"	64107-002	Not Required	---	---
	9"	91843-102	34013-397		8"	64107-001		1"	79814-000
	10"	91843-103	34013-312		9"	64107-003		---	---
22K	8"	91843-201	34013-278	82380-150	7"	64107-002	Not Required	---	---
	9"	91843-202	34013-397		8"	64107-001		1"	79814-000
	10"	91843-203	34013-312		9"	64107-003		---	---
24K	8"	91843-301	34013-254	82380-151	7.5"	64107-000	22962-051	---	---
	9"	91843-302	34013-255		8.5"	64107-006		1"	79814-000
	10"	91843-303	34013-314		9.5"	64107-007		---	---
KME									
20K	10"	80888-001	34013-312	82379-250	9"	64107-003	Not Required	---	---
	11"	80888-002	34013-313		10"	64107-008	Not Required	1"	79814-000
22K	10"	80888-101	34013-312	82380-250	9"	64107-003	Not Required	---	---
	11"	80888-102	34013-313		10"	64107-008	Not Required	1"	79814-000
24K	10"	80888-201	34013-314	82380-251	9.5"	64107-007	22962-051	---	---
	11"	80888-202	34013-315		10.5"	64107-009	22962-051	1"	79814-000
PIERCE									
18K	9	94307-001	34013-419	82378-250	8	64107-001	22962-051	---	---
	9.5	94307-002	34013-420	82378-251	8.5	64107-006		---	---
	10	94307-003	34013-256	82378-250	9	64107-003		1"	79814-000
20K	9	94307-101	34013-419	82379-300	8	64107-001	22962-051	---	---
	9.5	94307-102	34013-420	82379-301	8.5	64107-006		---	---
	10	94307-103	34013-256	82379-300	9	64107-003		1"	79814-000
24K	9	94307-201	34013-397	82380-300	8	64107-001	Not Required	---	---
	9.5	94307-202	34013-279	82380-301	8.5	64107-006		---	---
	10	94307-203	34013-312	82380-300	9	64107-003		1"	79814-000
ROSENBAUER									
18K	8"	80141-101	34013-278	82378-050	7"	64107-002	Not Required	---	---
	9.82"	80141-102	34013-256		9"	64107-003	22962-051	1"	79814-000
20K	8"	80141-201	34013-278	82379-050	7"	64107-002	Not Required	---	---
	9.5"	80141-202	34013-279		8.5"	64107-006	Not Required	1"	79814-000
					0.5"	80223-000			
24K	8"	80141-001	34013-254	82380-050	7.5"	64107-000	22962-051	---	---
	9"	80141-002	34013-255		8.5"	64107-006	22962-051	1"	79814-000

Continued on next page



TABLE 9-1

*Leaf Spring Assembly and Components

Capacity	Ride Height	Leaf Spring & Clamp Group Assembly	Clamp Group Service Kit	Leaf Spring Assembly	1" Hex Bolt		1" Flat Washer (USE ONLY AS SPECIFIED)	Leaf Spring Spacer			
					Length	Part No.		Thickness	Part No.		
SPARTAN											
18K	8.5	93068-001	34013-473	82795-100	7.5"	64107-000	Not Required	---	---		
	9.0	93068-002	34013-397	82795-000	8.0"	64107-001		---	---		
	9.5	93068-003	34013-279	82795-100	8.5"	64107-006		1"	79814-000		
	10.0	93068-004	34013-312	82795-000	9.0"	64107-003		---	---		
20K	9.0	93068-101	34013-397	82732-100	8.0"	64107-001		Not Required	---	---	
	9.5	93068-102	34013-279	82732-000	8.5"	64107-006			---	---	
	10.0	93068-103	34013-312	82732-100	9.0"	64107-003			1"	79814-000	
	10.5	93068-104	34013-474	82732-000	9.5"	64107-007			---	---	
22K	8.5	93068-201	34013-473	82734-100	7.5"	64107-000			Not Required	---	---
	9.0	93068-202	34013-397	82734-000	8.0"	64107-001				---	---
	9.5	93068-203	34013-279	82734-100	8.5"	64107-006				1"	79814-000
	10.0	93068-204	34013-312	82734-000	9.0"	64107-003				---	---
24K	9.5	93068-301	34013-256	82736-100	9.0"	64107-003	22962-051			---	---
	10.0	93068-302	34013-314	82736-000	9.5"	64107-007				---	---
	10.5	93068-303	34013-475	82736-100	10.0"	64107-008				1"	79814-000
SUTPHEN											
Capacity	Ride Height	Leaf Spring & Clamp Group Assembly	Clamp Group Service Kit	Leaf Spring Assembly	1" Hex Bolt		Right & Left Hand Lockout Spacer Part No.	1" Leaf Spring Spacer			
					Length	Part No.		Qty.		Part No.	
19K	10.1125	91367-001	34013-314	82378-110	9.5	64107-007	---	---		---	
	8	91367-002	34103-254	82378-101	7.5	64107-000		---		---	
	10	91367-003	34013-314		9.5	64107-007		2	79814-000		
20K	10.1125	91367-101	34013-314	82379-110	9.5	64107-007	---	---	---		
	8.2	91367-102	34103-254	82379-101	7.5	64107-000		---	---		
	10.2	91367-103	34013-314		9.5	64107-007		2	79814-000		
	9.2	91367-601 (LH)	34013-255	82379-102	8.5	64107-006	93448-000	---	---		
		91367-602 (RH)		82379-103							
	11.2	91367-603 (LH)	34013-315	82379-102	10.5	64107-009		2	79814-000		
91367-604 (RH)		82379-103									
24K	9.2125	91367-201	34013-255	82380-110	8.5	64107-006		---	---	---	
		91367-202									
	11.2125	91367-301 (LH)	34013-315	82380-111	10.5	64107-009	91432-000	2	79814-000		
		91367-302 (RH)		82380-112							
	9.2125	91367-303 (LH)	34013-255	82380-111	8.5	64107-006		---	---		
		91367-304 (RH)		82380-112							
	8.2125	91367-501	34103-254	82380-100	7.5	64107-000	---	1	79814-000		
	9.2125	91367-502	34013-255		8.5	64107-006	93448-000	---	---		
		91367-401 (LH)		82380-103							
		91367-402 (RH)		82380-104							
11.2125	91367-403 (LH)	34013-315	82380-103	10.5	64107-009	2		79814-000			
	91367-404 (RH)		82380-104								

NOTE: *Refer to the specific Hendrickson Parts List publication for your vehicle, available online at www.hendrickson-intl.com.



STEERTEK NXT HIGH CAPACITY AXLE

AXLE REMOVAL

1. Place the vehicle on level floor.
2. Chock the wheels.

WARNING

DO NOT USE A TORCH ON AXLE COLLAR FASTENERS OR ANY OTHER PART OF THE STEERTEK NXT HIGH CAPACITY STEER AXLE SYSTEM. THE USE OF A TORCH CAN CAUSE DAMAGE TO CERTAIN STEERTEK NXT COMPONENTS THAT CAN RESULT IN THE LOSS OF VEHICLE CONTROL AND POSSIBLE PERSONAL INJURY OR PROPERTY DAMAGE.

3. Raise the frame.
4. Support the vehicle with safety stands and suspend the front axle with the shock absorbers attached.
5. Remove the front tires and wheels ends.
6. Disconnect the drag link from the steering arm.
7. Support the axle and tie rod assembly with a suitable axle jack to prevent movement or rotation.

WARNING

DO NOT REPAIR OR RECONDITION SUSPENSION OR AXLE COMPONENTS FOUND TO BE DAMAGED OR OUT OF SPECIFICATIONS. ALL SUCH DAMAGED OR OUT OF SPECIFICATION COMPONENTS MUST BE REPLACED. ALL MAJOR HENDRICKSON COMPONENTS ARE HEAT TREATED AND TEMPERED. STEERTEK NXT COMPONENTS CANNOT BE BENT, WELDED, HEATED, OR REPAIRED WITHOUT REDUCING THE STRENGTH OR LIFE OF THE COMPONENT. FAILURE TO FOLLOW THESE GUIDELINES CAN CAUSE LOSS OF VEHICLE CONTROL, AND POSSIBLE PERSONAL INJURY OR DEATH OR PROPERTY DAMAGE AND WILL VOID APPLICABLE WARRANTIES.

8. Remove the 1" axle collar bolts and clamps, refer Leaf Spring and Clamp Group Disassembly.
9. Lower the axle and remove from the vehicle.

AXLE INSTALLATION




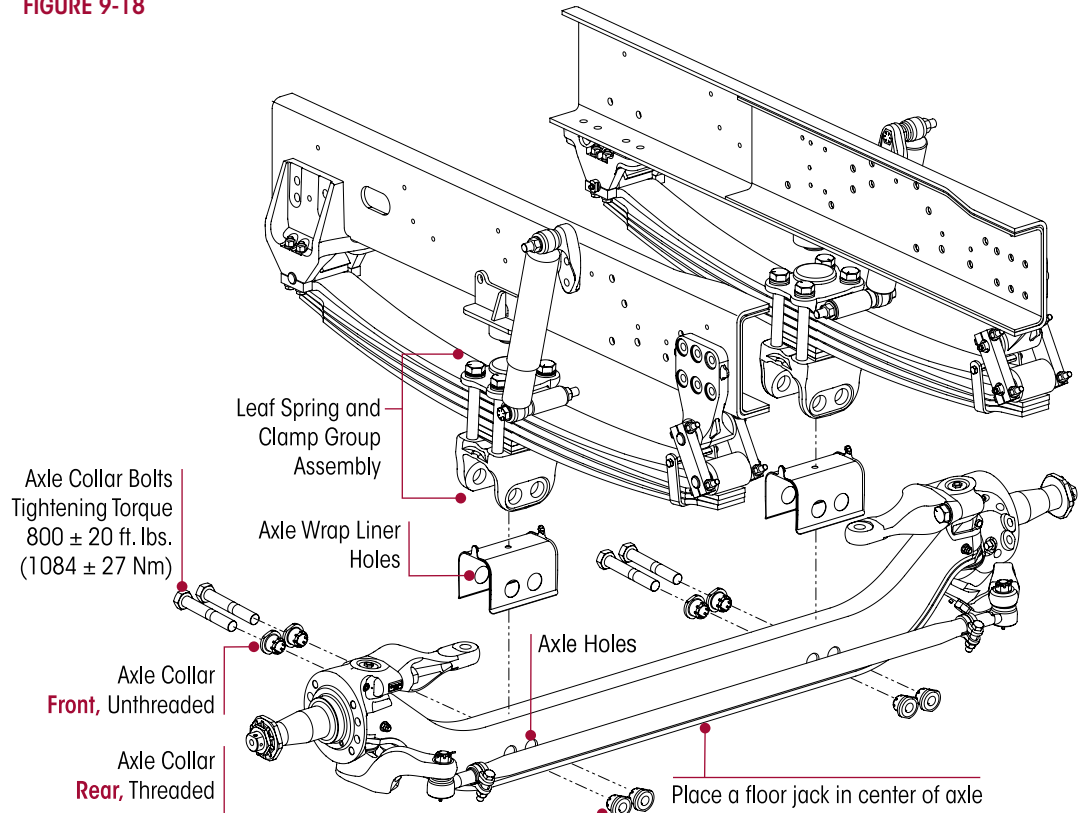
1. Place the new axle on a floor jack and position the axle under the vehicle, see Figure 9-18.
2. Install the new axle seat liner under the axle seat (liner ear snap to the side of the axle seat).
3. Raise the axle into position.
4. Ensure the axle seat liner holes are lined up with the axle seat and axle holes, see Figure 9-18.
5. Install the new axle collar fasteners with the bolt head located on the front side of the axle.
6. Tighten both sides, left and right of the axle collar bolts in four stages, stage one 100 foot pounds, stage two 350 foot pounds, stage three 700 foot pounds and the fourth and final  800 ± 20 foot pounds torque, see Figure 9-18.
7. Install the steering knuckles, refer to the Steering Knuckle Assembly instructions in this section.
8. Install the tie rod assembly in the tie rod arms.
9. Install the 7/8" hardened washers on the tie rod arm and the castle nuts. Tighten the castle nuts to  185 foot pounds, then rotate until the first castle slot lines up with the cotter pin bore in the tie rod end. **DO NOT** back off nut for cotter pin installation.
10. Install the tie rod end cotter pin.
11. Connect the drag link in the steering arm.
12. Install the castle nut on the drag link taper stud. Tighten the castle nut to  185 foot pounds, then rotate until the first castle slot lines up with the cotter pin bore in the drag link. **DO NOT** back off nut for cotter pin installation.
13. Install the drag link cotter pin.
14. Install the wheel ends and wheels per the vehicle manufacturer's guidelines.
15. Raise the vehicle and remove the safety stands.

FIGURE 9-18



16. Lower the vehicle and load the front axle with the truck's weight.
17. Remove the jack supporting the axle.
18. Remove the wheel chocks.
19. Fill the hubs with the proper lubricant, (see manufacturer's guidelines for recommended lubrication), if required.
20. Grease the front steering components as per lubrication guidelines in the Preventive Maintenance section of this publication.

KNUCKLE ASSEMBLY

NOTE

Knuckle assembly component replacement includes tie rod end, steering arm, tie rod arm, grease cap, draw key, kingpin (preparation and measurement), kingpin bushing (reaming) steering knuckle bore measurement, and kingpin seal removal and installation.

TIE ROD END DISASSEMBLY

You will need:

- 7/8"-14 tie rod end removal tool
1. Place the vehicle on level floor.
 2. Chock the wheels.
 3. Support the vehicle with safety stands.
 4. Raise and support the axle with safety stands.
 5. Remove the wheel assembly per the vehicle manufacturer's instructions.
 6. Remove the brake components from steering knuckle per the brake manufacturer's procedure. Refer to the specific parts list for the STEERTEK NXT high capacity steer axle system equipped on your vehicle available online at: www.hendrickson-intl.com/Truck/Fire-Rescue/STEERTEK-NXT-Fire




DO NOT USE A PICKLE FORK STYLE TOOL TO SEPARATE THE TIE ROD END FROM THE KNUCKLE ASSEMBLY. DOING SO WILL RESULT IN DAMAGE TO THE GREASE BOOT, TIE ROD END COMPONENTS, SEE FIGURE 9-20.

7. Use a $\frac{7}{8}$ " tie rod end removal tool to separate the tie rod end from the tie rod arm, see Figures 9-19 and 9-20.
8. Remove the tie rod assembly.

FIGURE 9-19
 $\frac{7}{8}$ " -14 Tie Rod End Removal Tool



FIGURE 9-20

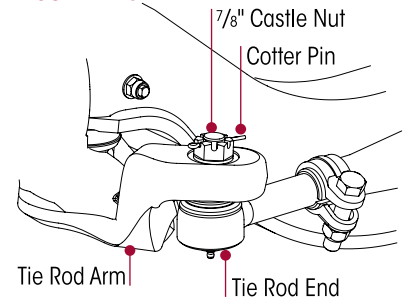

STEERING ARM DISASSEMBLY

1. Remove the two steering-arm-to-knuckle hex bolts from the knuckle assembly. Figure 9-21.
2. Remove the steering arm from the knuckle. If necessary, use a leather or plastic mallet to tap the outside of the arm and separate the arm from the knuckle.
3. Remove the steering arm.
4. Inspect the steering arm for cracks or damage, replace as necessary.

TIE ROD ARM DISASSEMBLY



SUPPORT THE TIE ROD ASSEMBLY DURING MAINTENANCE AND SERVICE TO PREVENT SERIOUS PERSONAL INJURY AND DAMAGE TO COMPONENTS.



DO NOT HEAT THE TIE ROD ARM TO REMOVE THE TIE ROD ASSEMBLY. HEATING THE TIE ROD ARM WILL SOFTEN PARTS AND DAMAGE TO COMPONENTS WILL RESULT.

1. Remove and discard tie rod arm $\frac{7}{8}$ " fasteners.
2. Remove the tie rod arms, see Figure 9-22.

FIGURE 9-21


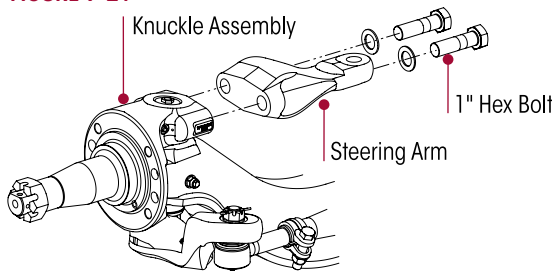


FIGURE 9-22

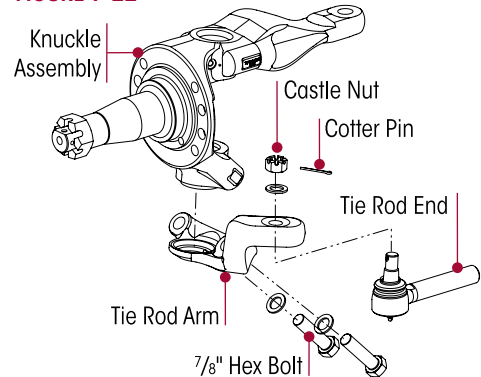


GREASE CAP, DRAW KEY, AND KINGPIN DISASSEMBLY

FIGURE 9-23

You will need:

- Brass drift and hammer
- Heavy-duty Kingpin Press that can generate 46,000 pounds of force and will accommodate kingpins size of 2" to $2\frac{5}{32}$ "

1. Remove the top grease cap.
2. Remove the draw keys.
 - a. Loosen the threaded draw key locknut until the top of the locknut is even with the end of the draw key, see Figure 9-23.

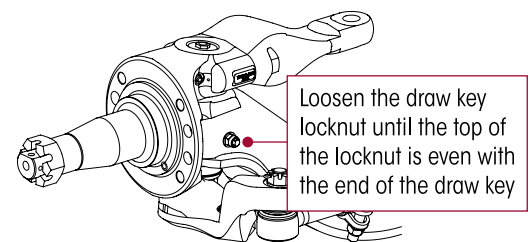

- b. Use a brass drift and a hammer to hit the end of the draw key.
- c. Remove the nut from the draw key. Remove the draw key from the knuckle.
3. If you are not replacing the bushings, use the following procedure to prevent damaging the bushings during kingpin removal.
 - a. Use a brass drift and a hammer to remove the kingpins from the knuckle. Figure 9-24.
 - b. Remove any flaring on the drift that touches the bushings.
 - c. Wrap tape to a thickness of 1/16" (1.5 mm) onto the end of the drift.

WARNING

DO NOT HEAT THE AXLE TO REMOVE THE KINGPIN. HEATING THE AXLE WILL DAMAGE THE AXLE AND STEERING KNUCKLE COMPONENTS. FAILURE TO DO SO CAN CAUSE, LOSS OF WARRANTY, LOSS OF VEHICLE CONTROL CAUSING PERSONAL INJURY OR PROPERTY DAMAGE.

4. If the kingpin is hard to remove, use a hydraulic kingpin remover, refer to the Special Tools section of this publication.
5. Remove the knuckle from the axle beam.

WARNING

WEAR GLOVES WHEN YOU REMOVE OR INSTALL SHIMS. SHIMS HAVE SHARP EDGES THAT CAN CAUSE SERIOUS PERSONAL INJURY.

6. While wearing gloves, remove the shims, thrust bearing, and seals from the beam and /or steering knuckle. Figure 9-25.
7. Inspect the parts, refer to the Preventive Maintenance section of this publication.

FIGURE 9-24


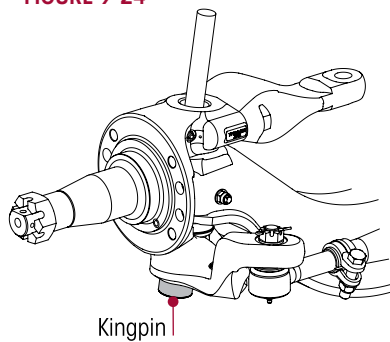


FIGURE 9-25

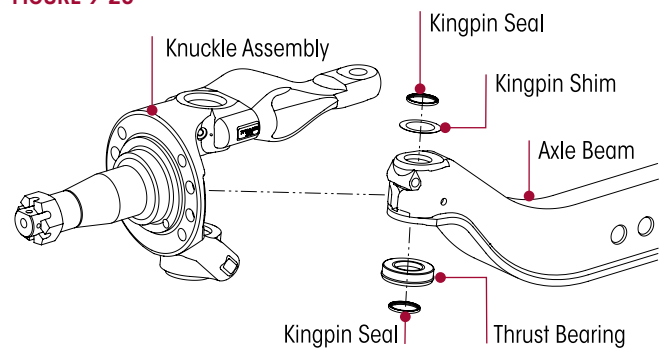

KINGPIN BUSHING

You will need:

- Impact wrench and adjustable straight flute reamer with a cutting diameter must facilitate a range of 2.0" to 2.01"
- Kingpin bushing and seal driver, installer and remover tools, refer to the Special Tools section of this publication for these shop made tools

REMOVAL

1. Place the steering knuckle on a workbench squarely supported.
2. Place the kingpin bushing and seal installer / remover tools in the steering knuckle / kingpin bore, see Figure 9-26.
3. Use a hammer and drive out the kingpin bushing, see Figure 9-27.
4. Rotate the knuckle over and repeat Steps 1-3 to remove the other kingpin bushing.
5. Clean the knuckle kingpin bores with a rotary wire wheel and inspect for reassembly, see Figure 9-28.



FIGURE 9-26



FIGURE 9-27



FIGURE 9-28



STEERING KNUCKLE BORE MEASUREMENT

Complete the following steering knuckle bore inspection and the measurement instructions prior to installing the kingpin bushing.

1. Measure the upper knuckle bore inside diameter at two locations. Always use an inside micrometer or a telescoping gauge when taking a knuckle bore measurement. Some out-of-roundness at the top and bottom of the bore edges is acceptable. Steering knuckle bore diameter is $2.127" \pm 0.002"$.
2. Measure the upper and lower bore in two positions and at two locations. The two positions must be 90° opposed from each other, see Figures 9-29 through 9-31. If the average measurement is more than the knuckle bore maximum diameter specification, replace the knuckle.

FIGURE 9-29



FIGURE 9-30



FIGURE 9-31




INSTALLATION

1. Install kingpin bushings from the axle side of the steering knuckle.
2. Place the new kingpin bushing into the steering knuckle bore so the seam **DOES NOT** align with the grease channel, see Figures 9-32 and 9-33.
3. Use the kingpin bushing driver to install the kingpin bushing into the steering knuckle bore, see Figure 9-34. Continue installation until the kingpin bushing is flush with the machined surface of the steering knuckle.



FIGURE 9-32

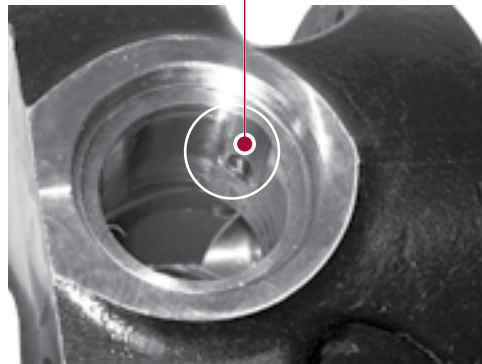

NOTE the location of the grease channel


FIGURE 9-33

DO NOT place the Kingpin Bushing Seam in line with the grease channel
INCORRECT Kingpin bushing orientation



4. Remove the kingpin bushing / seal driver.
5. Install the kingpin bushing and seal installer / remover tools.
6. Continue driving the kingpin bushing into the steering knuckle until it is flush with the bottom of kingpin seal bore, see Figures 9-35 and 9-36.
7. Repeat Steps for the remaining kingpin bushing.
8. Ream the bushings, see Kingpin Bushing Reaming in this section.

FIGURE 9-34

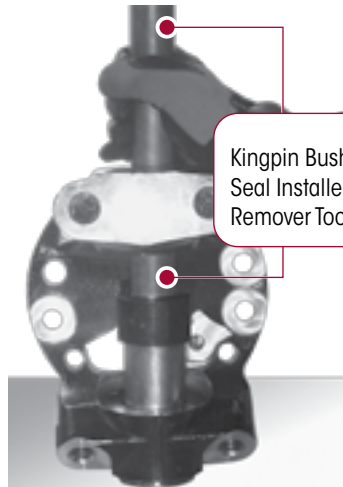

Kingpin Bushing Seal Installer / Remover Tool

FIGURE 9-35



FIGURE 9-36



KINGPIN PREPARATION AND MEASUREMENT

Cleaning Ground and Polished Parts

- Use a cleaning solvent to clean ground or polished parts and surfaces. **DO NOT USE GASOLINE.**
- **DO NOT** clean ground or polished parts in a hot solution tank or with water, steam, or alkaline solutions. These solutions will cause corrosion of the parts.

Drying the Cleaned Parts

- Parts must be dried immediately after cleaning. Dry the parts with clean paper towels, clean rags, or compressed air. **DO NOT** dry bearings by spinning with compressed air. Damage to the bearings will result.



Preventing Corrosion on Cleaned Parts

- Apply a light coating of oil to all cleaned and dried parts that are going to be reused. **DO NOT** apply oil to the brake lining or the brake drums. If parts are to be stored, apply an effective rust inhibitor to all surfaces.



TO HELP PREVENT SERIOUS EYE INJURY, ALWAYS WEAR PROPER EYE PROTECTION WHEN YOU PERFORM VEHICLE MAINTENANCE OR SERVICE



SOLVENT CLEANERS CAN BE FLAMMABLE, POISONOUS AND CAUSE BURNS. TO HELP AVOID SERIOUS PERSONAL INJURY, CAREFULLY FOLLOW THE MANUFACTURER'S PRODUCT INSTRUCTIONS AND GUIDELINES AND THE FOLLOWING PROCEDURES:

- WEAR PROPER EYE PROTECTION.
- WEAR CLOTHING THAT PROTECTS YOUR SKIN.
- WORK IN A WELL VENTILATED AREA.
- DO NOT USE GASOLINE, SOLVENTS OR OTHER MATERIALS THAT CONTAIN GASOLINE THAT CAN EXPLODE.
- HOT SOLUTION TANKS OR ALKALINE SOLUTIONS MUST BE USED CORRECTLY. FOLLOW THE MANUFACTURER'S RECOMMENDED INSTRUCTIONS AND GUIDELINES CAREFULLY TO HELP PREVENT PERSONAL ACCIDENT OR INJURY.



DO NOT USE HOT SOLUTION TANKS OR WATER AND ALKALINE SOLUTIONS TO CLEAN GROUND OR POLISHED PARTS. DAMAGE TO THE PARTS WILL RESULT.

1. Inspect the kingpin for wear or damage. Use a micrometer and measure the kingpin. If the kingpin has less than 2.0" diameter, replacement is necessary, see Figure 9-37.
2. Set up the adjustable straight flute reamer to match kingpin dimension, see Figure 9-38. The dimension of cutting diameter must facilitate a range of 2.0" to 2.001".

Kingpin minimum dimension is 2.0"

FIGURE 9-37


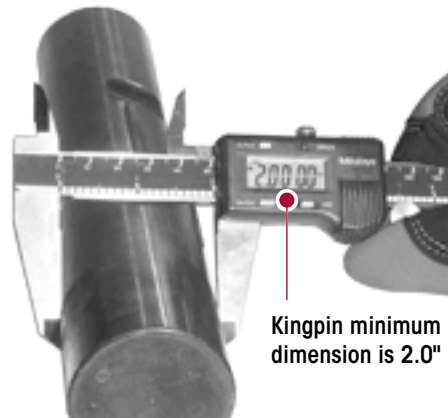


FIGURE 9-38

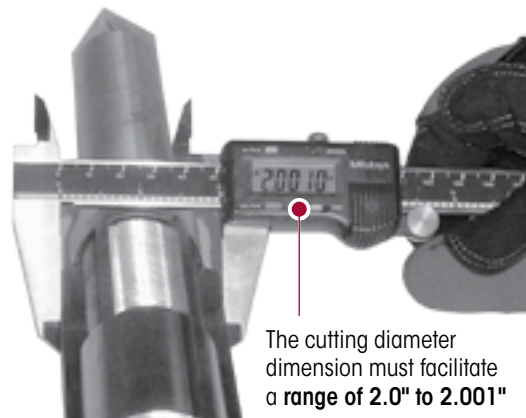

KINGPIN BUSHING REAMING

You will need:

- Adjustable straight flute reamer, refer to the Special Tools section of this publication.



REAM THE KINGPIN BUSHINGS WITH AN ADJUSTABLE STRAIGHT FLUTE REAMER. (SEE SPECIAL TOOLS SECTION OF THIS PUBLICATION) DO NOT HONE OR BURNISH THE KINGPIN BUSHINGS. HONING OR BURNISHING WILL DAMAGE THE BUSHINGS AND VOID ANY APPLICABLE WARRANTY.



WHEN INSTALLING STEERING KNUCKLE COMPONENTS IN A VISE IT IS NECESSARY TO PROTECT THE MACHINED SURFACES FROM GOUGES OR MARRING BY USING BRASS JAWS, SEE FIGURE 9-39. FAILURE TO DO SO CAN CAUSE PREMATURE PART DAMAGE, DAMAGE TO THE STEERING KNUCKLE COMPONENTS, LOSS OF WARRANTY, LOSS OF VEHICLE CONTROL, CAUSING PERSONAL INJURY OR PROPERTY DAMAGE.



WARNING

PRIOR TO INSTALLATION ENSURE THAT ALL RESIDUAL LOCTITE® MATERIAL IS REMOVED FROM THE MOUNTING BOLTS AND THE THREAD BORES IN THE UPPER STEERING KNUCKLES, AND NEW LOCTITE 277 OR EQUIVALENT IS APPLIED TO HELP ENSURE THAT THE BOLTS SUSTAIN THE PROPER TORQUE REQUIREMENT. FAILURE TO DO SO CAN CAUSE LOSS OF VEHICLE CONTROL RESULTING IN PERSONAL INJURY OR PROPERTY DAMAGE.

NOTE

Bushing size is to be 0.001" larger than the kingpin size.

1. Place the knuckle in a vise with brass jaws (soft jaws), see Figure 9-39.
2. Install the pilot in the lower kingpin bore.
3. Install the adjustable straight flute reamer into the pilot.
4. Slide the adjustable straight flute reamer into the upper bushing and into the pilot until the reamer blades touch the bushing.
5. Rotate the adjustable straight flute reamer with a light **DOWNWARD** pressure. **DO NOT** apply too much force. Rotate the reamer smoothly, see Figure 9-40.
6. Turn the knuckle over in the vise and repeat Steps 2-5 for the other kingpin bushing, see Figures 9-40 and 9-41.

FIGURE 9-39

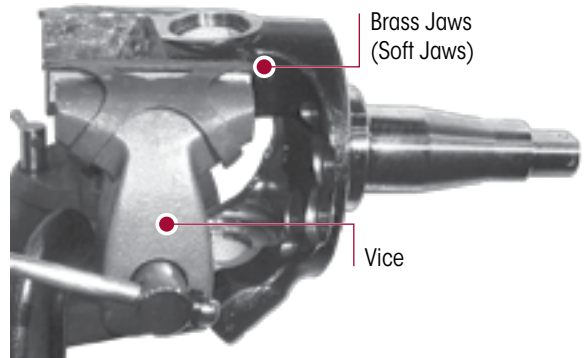


FIGURE 9-40


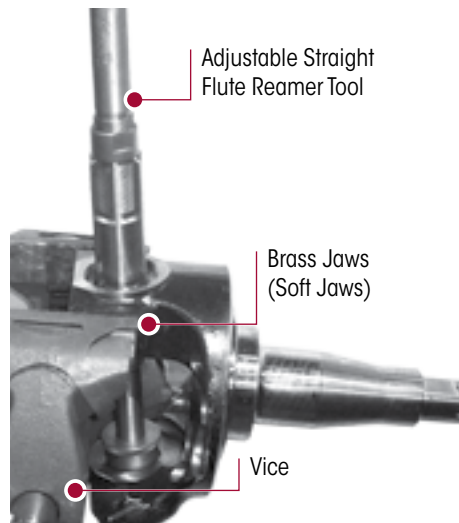


FIGURE 9-41

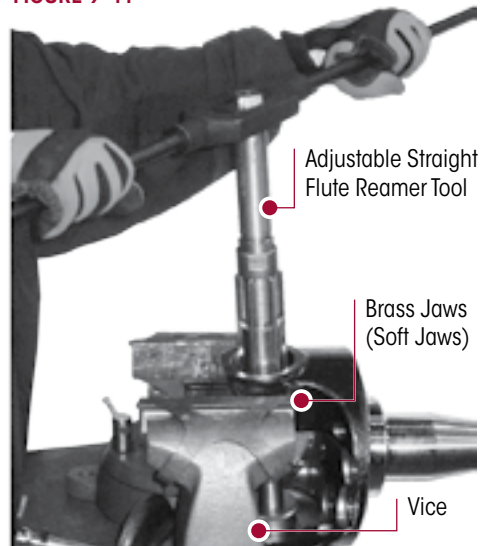

SERVICE HINT

If the adjustable straight flute reamer must be removed through the bushing. Rotate the tool in the opposite cutting direction.

7. Clean all material from the bushings.
8. Lightly lubricate the new the kingpin with penetrating oil and slide into the steering knuckle bore to ensure the kingpin fits properly into the kingpin bushings.

KINGPIN SEAL INSTALLATION

You will Need:

- Kingpin seal driver/remover tool, refer to the Special Tools section of this publication.

1. Place the steering knuckle assembly on a suitable workbench.



2. Lay the kingpin seal into the bore of the steering knuckle. Ensure the lip of the kingpin seal faces toward the axle, see Figure 9-42.
3. Use a kingpin seal driver/remover tool and drive the seal firmly into the steering knuckle assembly with a hammer.
4. Install the kingpin seal until it bottoms out in the kingpin bore, see Figure 9-43.

FIGURE 9-42

Ensure the lip of the Kingpin Seal is facing **towards** the axle.



FIGURE 9-43

Kingpin seal bottoms out in the kingpin bore



STEERING KNUCKLE INSTALLATION


1. Clean the kingpin bores of the axle beam.
2. Install the thrust bearing assembly on the inner steering knuckle. The seal must face **UPWARD** toward the beam. The top inner diameter will contact the bottom of the axle beam, see Figure 9-44.



WEAR GLOVES WHEN YOU INSTALL THE KINGPIN SHIMS. SHIMS HAVE SHARP EDGES THAT CAN CAUSE SERIOUS PERSONAL INJURY.

FIGURE 9-44

Kingpin Seal **MUST** face upward towards the axle

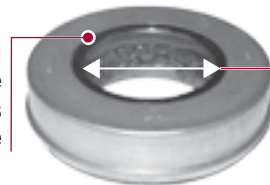

Top View

The top inner diameter contacts the bottom of the axle beam



Bottom View

3. Place the knuckle onto the axle beam, see Figure 9-45.
4. Place a pry bar between the steering arm boss and the axle beam. Lift the knuckle and slide the kingpin shim(s) between the top of the beam and the steering knuckle, see Figure 9-46.

FIGURE 9-45


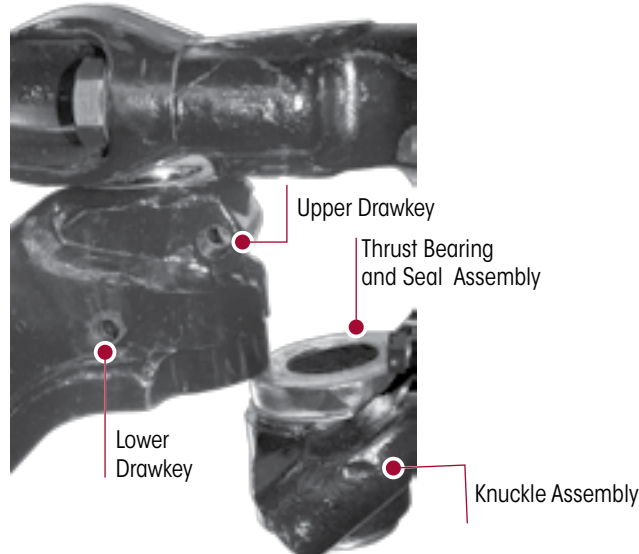


FIGURE 9-46



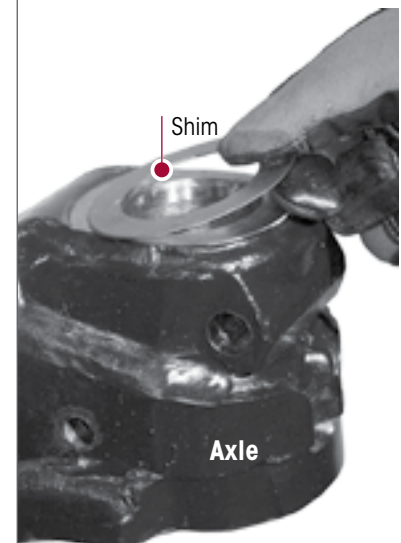

5. Align all the steering knuckle components within the kingpin bore. If the bores are not aligned, the components will be damaged during kingpin installation.
6. Remove the pry bar.
7. Apply the multi-purpose grease onto the bottom half of the kingpin prior to kingpin installation onto the steering knuckle.

CAUTION

VERIFY THAT THE DRAW KEY IS INSTALLED COMPLETELY OR THE LOCKNUT IS TIGHTENED TO 35 ± 5 FOOT POUNDS TORQUE. IF NOT INSTALLED CORRECTLY, THE KINGPIN AND THE AXLE BEAM WILL BE DAMAGED.

8. Install the kingpin into the top of the knuckle and through the area where the shims are located, see Figures 9-47 and 9-48. **DO NOT** force the kingpin through the upper kingpin bushing. Ensure the word **TOP** is facing up, see Figure 9-49.

FIGURE 9-47

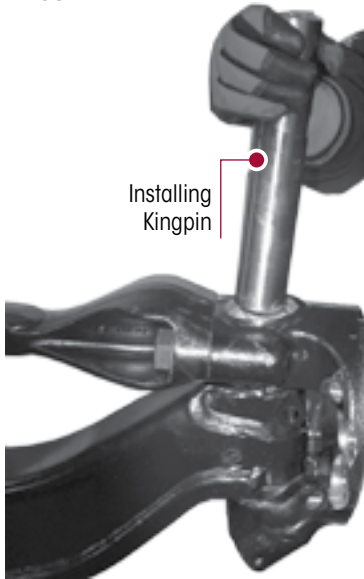


FIGURE 9-48


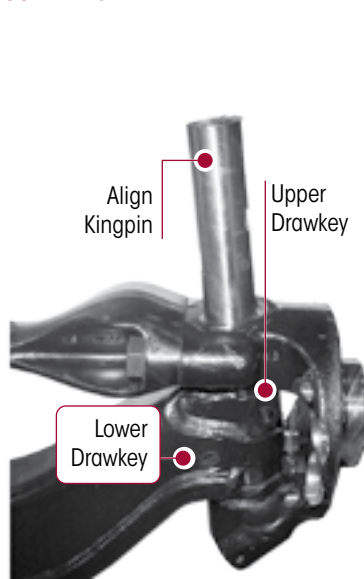


FIGURE 9-49




9. Rotate the kingpin and slide in until the two draw key slots align with the axle draw key bores, see Figure 9-50 and 9-51.
10. If required, use a hammer and a brass drift to apply direct force to the kingpin for seating into the lower steering knuckle bore, see Figure 9-50.
11. Seat the upper draw key into the front of the axle beam, see Figure 9-51.
12. Seat the lower draw key into the back of the axle beam by striking it with a hammer and drift, see Figure 9-50. The draw keys must align with the slots of the kingpin.
13. Install draw key locknuts, Snug, **DO NOT** tighten torque until after the steering knuckle vertical end play procedure is completed.

FIGURE 9-50
LOWER DRAW KEY

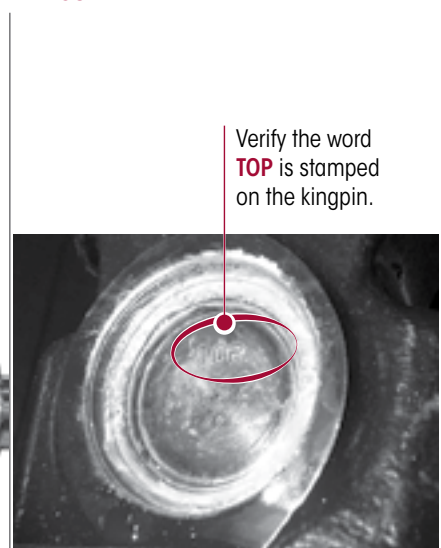

4 $\frac{3}{4}$ " Draw Key
Part No. 75925-002
Back of the Axle Beam

FIGURE 9-51
UPPER DRAW KEY

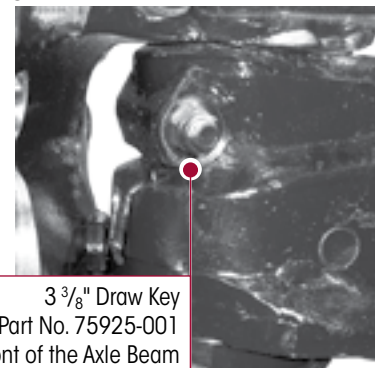

3 $\frac{3}{8}$ " Draw Key
Part No. 75925-001
Front of the Axle Beam



MEASURE STEERING KNUCKLE VERTICAL END PLAY

1. Turn the knuckle to the straight-ahead position.
2. Attach a dial indicator to the axle. Place the tip onto the top of the steering knuckle.
3. Set the dial indicator to **zero**, see Figure 9-52.
4. Use one of the following methods to measure the vertical clearance.
 - Place a pry bar between the knuckle and the top of the axle center. Pry the knuckle up and measure the vertical end play.
 - Place a block of wood and a hydraulic jack under the bottom of the knuckle. Raise the knuckle until the pointer on the dial indicator stops, see Figure 9-52.
5. Record dial indicator reading.
 - If the knuckle binds or **zero** end play is measured, remove shims from the shim pack.
 - If the reading is more than the correct specification shown in Table 9-2, add shims to the shim pack.

FIGURE 9-52

Ensure the tip of the dial indicator is on the top of the upper steering knuckle and not on the grease cap



TABLE 9-2

END PLAY SPECIFICATIONS

New or Rebuilt Axles	0.001-0.010 inch (0.025-0.254 mm)
In-service Axles	0.001-0.030 inch (0.025-0.762 mm)

6. Tighten upper and lower draw key locknuts to 35 ± 5 foot pounds torque.

GREASE CAP INSTALLATION

WARNING

TAKE CARE WHEN YOU USE LOCTITE ADHESIVE TO AVOID SERIOUS PERSONAL INJURY. READ THE MANUFACTURER'S INSTRUCTIONS BEFORE USING THIS PRODUCT. FOLLOW THE INSTRUCTIONS CAREFULLY TO PREVENT IRRITATION TO THE EYES AND SKIN. IF LOCTITE® ADHESIVE MATERIAL GETS INTO YOU EYES, FOLLOW THE MANUFACTURER'S EMERGENCY PROCEDURES. HAVE YOUR EYES CHECKED BY A PHYSICIAN AS SOON AS POSSIBLE.

NOTE

If reusing a grease cap, ensure to apply the Loctite Straight Thread Sealant™ (STS) all around the threads (apply to a minimum of 3 threads), see Figure 9-53.


FIGURE 9-53

Apply Loctite STS to a minimum of three grease cap threads



FIGURE 9-54

Grease Cap Tightening Torque 60 ± 10 ft. lbs.

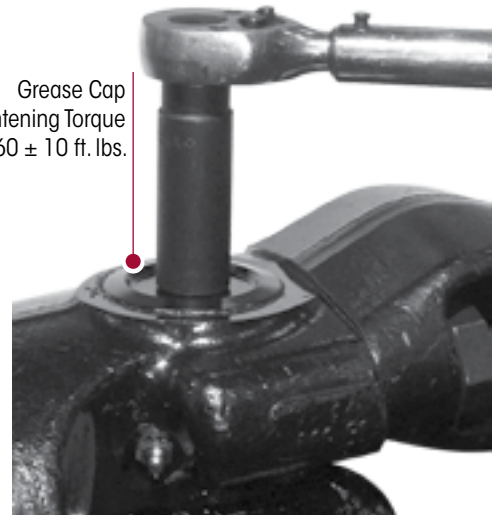

1. Ensure Loctite STS is applied to a minimum of three grease cap threads (note: new grease caps have Loctite STS pre-applied).
2. Install the threaded grease caps onto the top of the knuckle.
3. Tighten the grease caps to 60 ± 10 foot pounds, see Figure 9-54.
4. Remove the bottle jack and continue assembling the wheel ends.


STEERING ARM INSTALLATION



TAKE CARE WHEN YOU USE LOCTITE ADHESIVE TO AVOID SERIOUS PERSONAL INJURY. READ THE MANUFACTURER’S INSTRUCTIONS BEFORE USING THIS PRODUCT. FOLLOW THE INSTRUCTIONS CAREFULLY TO PREVENT IRRITATION TO THE EYES AND SKIN. IF LOCTITE ADHESIVE MATERIAL GETS INTO YOU EYES, FOLLOW THE MANUFACTURER’S EMERGENCY PROCEDURES. HAVE YOUR EYES CHECKED BY A PHYSICIAN AS SOON AS POSSIBLE.

1. Use a tap to remove old Loctite adhesive from the internal threads of the knuckle assembly.
2. On the new steering arm hex bolts apply Loctite 277 adhesive to the thread area. Ensure to cover at least half of the thread area.
3. Insert the hex bolts through the steering arm. Hand-start the bolts into the knuckle assembly, see Figure 9-55.
4. Tighten the steering arm hex bolts to 637 ± 13 foot pounds torque.


FIGURE 9-55

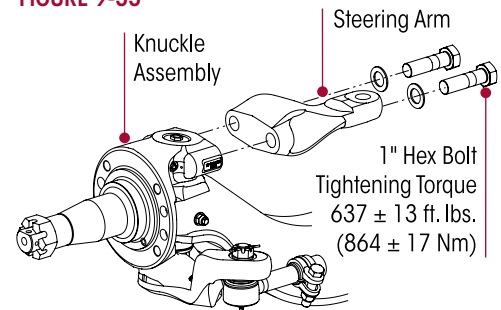

TIE ROD ARM INSTALLATION

1. Install a new O-ring on the bottom of the steering knuckle.
2. Use a tap to remove the old Loctite adhesive from the internal threads of the knuckle assembly.
3. On the new tie rod arm hex bolts apply Loctite 277 adhesive to the threads. Ensure to cover at least half of the thread area.
4. Lubricate the O-ring with grease and install tie rod arm on the bottom of the steering knuckle assembly.
5. Insert the tie rod arm hex bolts through the tie rod arm and into the steering knuckle. Hand-start the bolts into the knuckle assembly, see Figure 9-56.
6. Tighten the tie rod arm bolts to 487 ± 13 foot pounds torque, see Figure 9-56.
7. Install the tie rod end into the tie rod arm, see Figure 9-56.
8. Tighten the tie rod castle nuts to 185 foot pounds torque then rotate the castle nut to the next castle slot and install cotter pin, see Figure 9-56.
9. Install the brake torque plate per the vehicle manufacturer’s instructions.

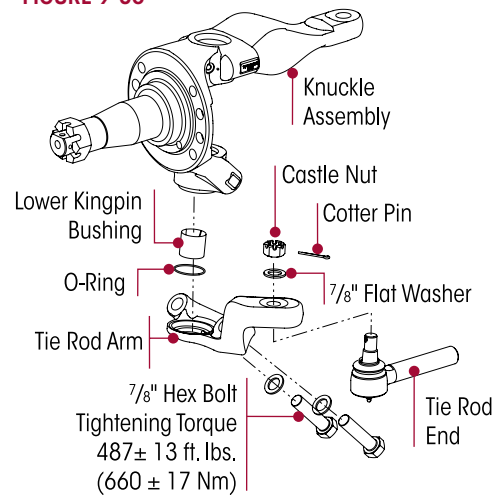

FIGURE 9-56



IMPORTANT NOTE

It is critical to apply Loctite 262 to the brake torque plate bolts prior to installation to ensure the bolts sustain the proper steering knuckle torque requirement.



10. Apply Loctite 262 to the torque plate bolts, then install the torque plate bolts and tighten to:
 - M20 x 55 mm  400 ± 50 foot pounds
 - M20 x 60 mm  375 ± 25 foot pounds
11. Install the drag link into the steering arm and tighten to the vehicle manufacturer's specifications.
12. Install the brakes, wheel ends and tires per the vehicle manufacturer's instructions.
13. Remove the jack and safety stands.
14. Grease the steering knuckles with the vehicle on the floor.
15. Remove the wheel chocks.

TIE ROD ENDS AND CROSS TUBE

You will need:

- 7/8"-14 tie rod end removal tool, see Figure 9-58

DISASSEMBLY

1. Chock the wheels.
2. Position the steer axle tires straight ahead.
3. Remove the cotter pin and castle nut, see Figure 9-57.
4. Use a 7/8" -14 tie rod end removal tool (see Figure 9-58) to separate the tie rod end from the tie rod arm.
5. Repeat Steps 3 and 4 to remove the other tie rod end to remove the tie rod assembly.
6. Remove the tie rod assembly from the vehicle.
7. Mount the cross tube in a soft jaw vice.
8. Remove the tie rod clamp hardware from the cross tube.
9. Count the exposed threads on the tie rod end being replaced.

FIGURE 9-57

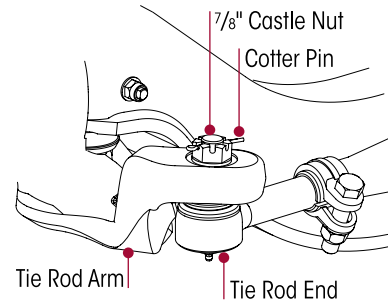


FIGURE 9-58

7/8" -14 Tie Rod End Removal Tool



DO NOT HEAT THE CROSS TUBE WITH A TORCH TO FACILITATE THE REMOVAL OF THE TIE ROD END. THE USE OF SUCH HEAT CAN ADVERSELY AFFECT THE STRENGTH OF THE CROSS TUBE. A COMPONENT DAMAGED IN THIS MANNER WILL RESULT IN LOSS OF WARRANTY, AND CAN RESULT IN THE AND LOSS OF VEHICLE CONTROL, AND POSSIBLE PERSONAL INJURY OR PROPERTY DAMAGE.

10. Remove the tie rod end from the cross tube.
11. If the opposing tie rod end is being replaced repeat Steps 8 through 10.
12. Inspect the cross tube for dents, cracks, or thread damage, replace as necessary.

ASSEMBLY

1. Lubricate the new tie rod end threads with Anti-Seize.

NOTE

When installing the cross tube, the thread direction of the tie rod ends are as follows:

- A right hand threaded tie rod end will be installed into the right side tie rod arm
- A left hand threaded tie rod end will be installed into the left side tie rod arm.

2. Install the new tie rod end(s) into the cross tube, leaving the same amount of threads exposed that were counted on the removed tie rod end.




THE THREADED PORTION OF THE TIE ROD END MUST EXTEND PAST THE SLOTS INTO THE TIE ROD CROSS TUBE, SEE FIGURE 9-59. FAILURE TO DO SO CAN CAUSE COMPONENT DAMAGE, LOSS OF VEHICLE CONTROL AND POSSIBLE PERSONAL INJURY OR PROPERTY DAMAGE.

WARNING

IT IS CRITICAL TO CHECK THE 5/8" TIE ROD CLAMP BOLT HEAD LOCATION TO VERIFY THE CLAMP FASTENERS HAVE SUFFICIENT CLEARANCE AWAY FROM THE LOWER SHOCK MOUNT AT FULL WHEEL CUT. THE FASTENERS MUST NOT CONTACT THE LOWER SHOCK MOUNT. FAILURE TO DO SO CAN CAUSE ONE OR MORE COMPONENTS TO FAIL CAUSING LOSS OF VEHICLE CONTROL AND POSSIBLE PERSONAL INJURY OR PROPERTY DAMAGE.

3. If replacing the opposing tie rod end is not necessary, it is critical that the ball and socket are free to rotate in the opposing tie rod end.
4. Replace the opposing tie rod end if necessary, by repeating Steps 1 and 2.
5. Install both tie rod ends into the lower steering knuckles.

FIGURE 9-59

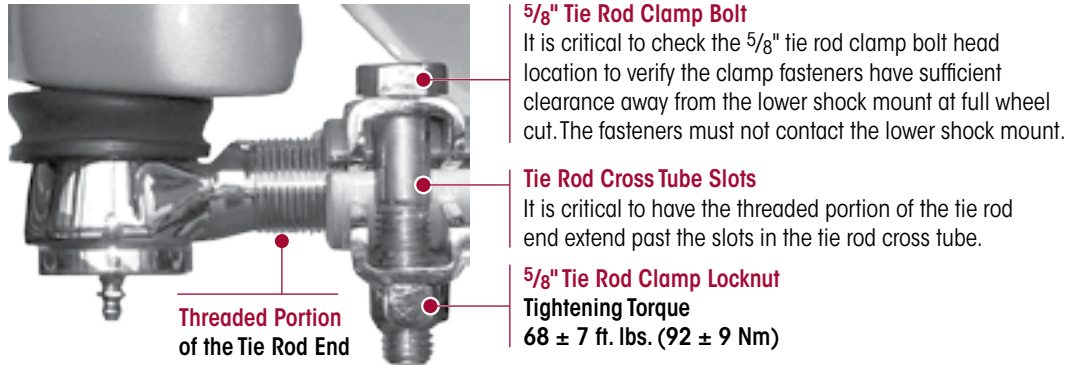

6. Install the tie rod assembly by placing both tie rod ends into the lower steering knuckles.
7. Tighten the castle nuts to 185 foot pounds torque, then rotate the castle nut to the next castle slot and install the cotter pin.
8. Grease the tie rod ends with the specified lubricant, see lubrication specifications and procedure in the Preventive Maintenance section of this publication.
9. Set the toe, refer to the Toe Adjustment procedure in the Alignment & Adjustments section of this publication.
10. Remove the wheel chocks.

AIR DISC BRAKES • DRUM BRAKES ASSEMBLIES

NOTE

Additional brake component part and service information as referenced in the applicable STEERTEK NXT High Capacity Parts Lists per the Parts List section .

Brake components are not supplied by Hendrickson for aftermarket service purposes. For more information and assistance with service, maintenance, and rebuild instructions on these components contact the respective brake components supplier as identified in the specific STEERTEK NXT High Capacity system parts list for your make of vehicle, available online at:

www.hendrickson-intl.com/Truck/Fire-Rescue/STEERTEK-NXT-Fire



SECTION 10 Alignment Specifications


STEERTEK NXT High Capacity System for Fire and Rescue Vehicles

FRONT SUSPENSION ALIGNMENT SPECIFICATIONS			
CAMBER ¹	DESIGN SPECIFICATION	RANGE	
		MINIMUM	MAXIMUM
LEFT	0.0°±1.0°	-1.0°	+1.0°
RIGHT	-0.25°±1.0°	-1.25°	+0.75°
CROSS	0.0°	—	+2.0°
CAMBER NOTES:			
¹ The camber angle is not adjustable. DO NOT bend axle or otherwise try to adjust camber. If found out of specification, notify Hendrickson Tech Services for further information.			
CASTER ^{1,2}	DESIGN SPECIFICATION	RANGE	
		MINIMUM	MAXIMUM
LEFT	3.75°±1.0°	+2.75°	+4.75°
RIGHT	3.75°±1.0°	+2.75°	+4.75°
CROSS ^{1,3}	0.0°	—	+1.5°
CASTER NOTES:			
¹ The caster angle is not adjustable – DO NOT replace or remove caster wedge. DO NOT bend axle or otherwise try to adjust caster. Caster is to be measured with the vehicle at the rated load for mechanical suspension systems. Ensure the vehicle ride height is within specification prior to performing a caster measurement or adjustment.			
² In most cases actual vehicle caster is defined with the frame rails at zero slope. Refer to the vehicle manufacturer’s specifications for correct frame rail slope. (Both the alignment surface and the vehicle’s frame rails should be level during execution of alignment procedures). For vehicles with a positive frame rake (higher in rear) add the frame slope (in degrees) to the caster reading to determine true vehicle caster.			
³ The cross caster angle is not adjustable – DO NOT bend axle or otherwise try to adjust cross caster. If caster measurement falls outside of the specification, notify Hendrickson Tech Services for further information. Changes to caster can be attained by using caster shims provided by the chassis or body manufacturer. Caster shims must match, side to side to reduce uneven loading to the suspension components. The use of two (2) different angle caster shims will not correct cross caster.			
Hendrickson recommends the following practices:			
TOTAL TOE	DESIGN SPECIFICATION ¹	RANGE	
		MINIMUM	MAXIMUM
	1/16" ± 1/32" (0.06" ± 0.03")	1/32" (0.03")	3/32" (0.09")
TOE-IN NOTES:			
¹ Toe-in is to be set and adjusted in the normal vehicle unladed configuration. Actual vehicle curb weight on the ground. Toe should be checked at the tires front and rear tread center, at a distance above ground equal to the tire’s rolling radius.			



SECTION 11 Torque Specifications

Hendrickson Recommended Torque Values
Provided in Foot Pounds and in Nm

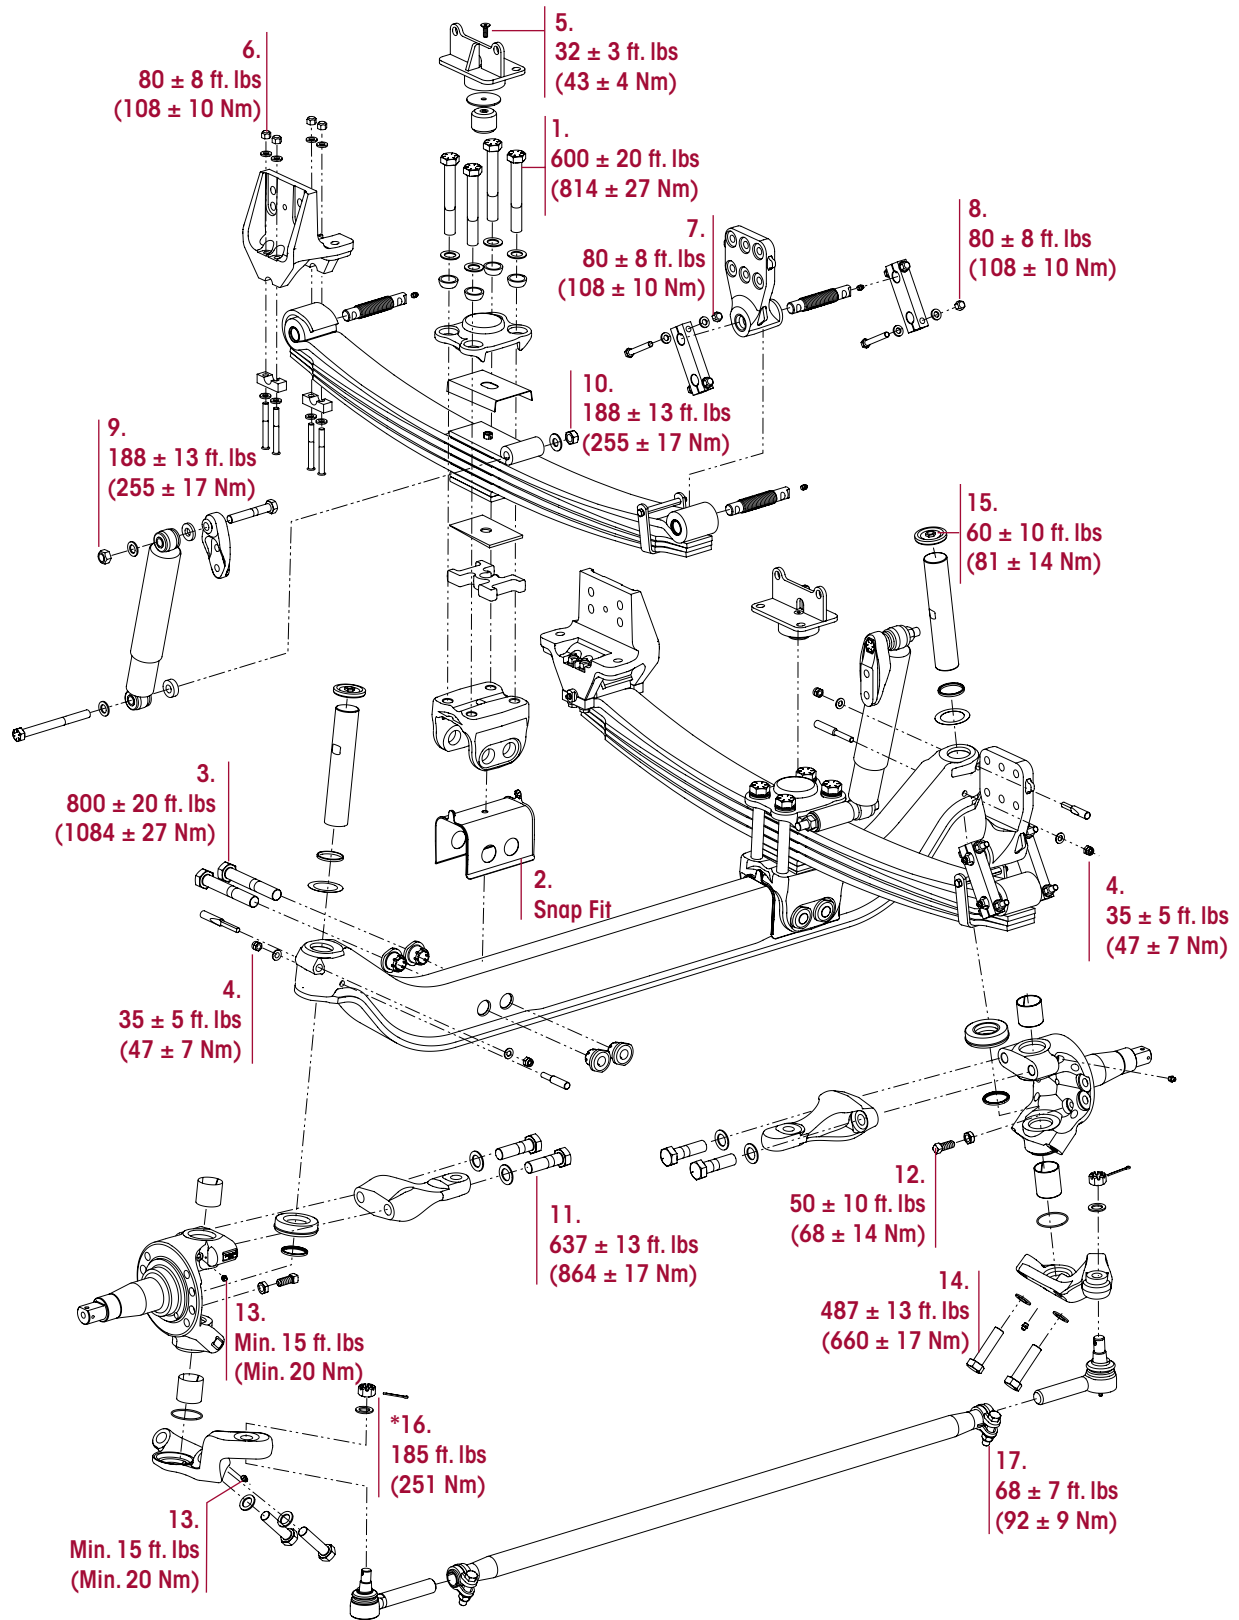



STEERTEK NXT High Capacity System for Fire and Rescue Vehicles


HENDRICKSON RECOMMENDED TORQUE SPECIFICATIONS

NO.	COMPONENT	FASTENER		TORQUE VALUE	
		QUANTITY	SIZE	Foot Pounds	Newton Meters
<p>Frame fasteners are furnished and installed by the vehicle manufacturer. Vehicle manufacturer may use an equivalent HUCK fastener at frame mount. All hardware ¼" and greater is Grade 8 with no additional lubrication.</p> <p>⚠ WARNING ENSURE LEAF SPRING & CLAMP GROUP ASSEMBLY IS ALIGNED PROPERLY PRIOR TO TIGHTENING HARDWARE. FAILURE TO DO SO CAN CAUSE LOSS OF VEHICLE CONTROL, PROPERTY DAMAGE OR PERSONAL INJURY.</p>					
1	Leaf Spring & Clamp Group Assembly Hex Bolts	8	1"-8 UNC	600 ± 20	814 ± 27
2	Axle Seat Liner	2		Snap Fit	Snap Fit
3	Axle Collar at the Bolt Head	4	1"-8 UNC	800 ± 20	1084 ± 27
4	Kingpin Draw Key Nut	4	7/16"-14 UNC	35 ± 5	47 ± 7
5	Jounce Stop	2	M10	32 ± 3	43 ± 4
6	Front Frame Hanger to Leaf Spring Assembly	8	½"-20 UNC	80 ± 8	108 ± 10
7	Rear Shackle to Rear Frame Hanger	4	½"-20 UNC	80 ± 8	108 ± 10
8	Rear Shackle to Leaf Spring Assembly	4	½"-20 UNC	80 ± 8	108 ± 10
9	Upper Shock Absorber	2	¾"-10 UNC	188 ± 13	255 ± 17
10	Lower Shock Absorber	2	¾"-10 UNC	188 ± 13	255 ± 17
11	Knuckle Assembly to Steering Arm	4	1"-14 UNF	637 ± 13	864 ± 17
12	Axle Wheel Stop Jam Nut	2	5/8" Jam Nut	50 ± 10	68 ± 14
13	Grease Zerk	4		Minimum of 15	Minimum of 20
14	Knuckle Assembly to Tie Rod Arm	4	7/8"-14 UNF	487 ± 13	660 ± 17
15	Grease Cap	2	½"	60 ± 10	81 ± 14
16	Tie Rod Ends to Tie Rod Arms	2	7/8" Castle Nut	*185	*251
17	Tie Rod Tube to Tie Rod Ends	2	5/8"	68 ± 7	92 ± 9
<p>NOTE: All hardware information in the matrix denotes recommended torques for fasteners originally supplied by Hendrickson. If non Hendrickson fasteners are used, follow torque specifications listed in the vehicle manufacturer's service manual. Hendrickson is not responsible for maintaining vehicle manufacturer's torque values.</p> <p>* Tighten to 185 foot pounds torque, advance the castle nut to the next hex face to install the cotter pin. DO NOT back-off nut for cotter pin installation.</p>					


STEERTEK NXT High Capacity System for Fire and Rescue Vehicles

HENDRICKSON RECOMMENDED TORQUE SPECIFICATIONS

Air Disc Brakes

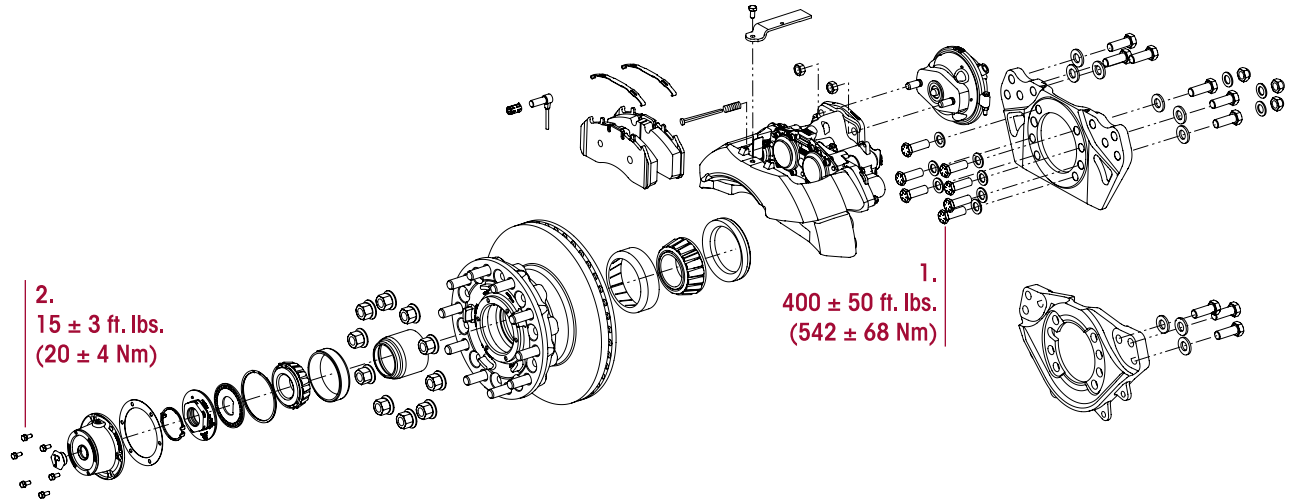

Drum Brakes

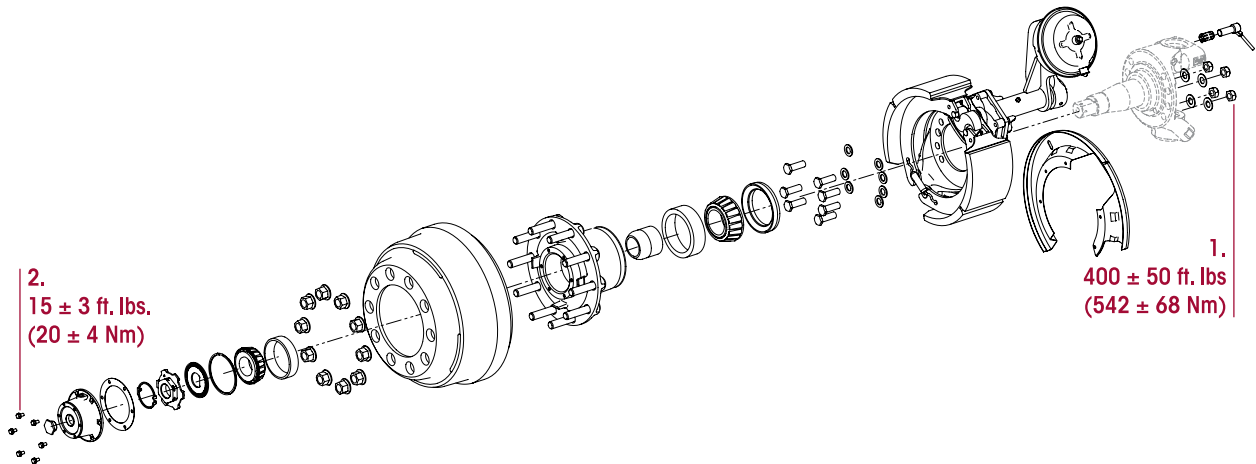

NO.	COMPONENT	FASTENER		*TORQUE VALUE	
		QUANTITY	SIZE	Foot Pounds	Newton Meters
1.	Torque Plate / Brake Mounting Fastener	Varies	3/4"-10 UNC	400 ± 50	542 ± 68
2.	Hub Cap	12	5/16"-18 UNC	15 ± 3	20 ± 4

NOTE: For fasteners not supplied by Hendrickson, follow the torque specifications listed in the vehicle manufacturer’s or the component manufacturer’s service manual. Contact the respective brake components supplier, as identified in the specific STEERTEK NXT High Capacity system parts list for your make of vehicle, available online at: www.hendrickson-intl.com/Truck/Fire-Rescue/STEERTEK-NXT-Fire



SECTION 12

Reference Material

This technical publication covers Hendrickson Truck Suspension's recommended procedures for our parts/products. Other components play a major role in overall performance and Hendrickson recommends you follow the specific vehicle manufacturer's recommendation for care and maintenance. Some recommended procedures have been developed by TMC and Hendrickson supports these recommendations.

To obtain copies of TMC's Recommended Practices Manual at:

TMC / ATA Headquarters
950 North Glebe Road, Suite 210
Arlington, VA 22203-4181

Phone: 703-838-1763
website: tmc.trucking.org
online ordering: atabusinessolutions.com/Shopping



SECTION 13 Troubleshooting Guide

STEERTEK NXT High Capacity System for Fire and Rescue Vehicles

TROUBLESHOOTING GUIDE		
CONDITION	POSSIBLE CAUSE	CORRECTION
Worn or damaged kingpins and kingpin bushings	Dirt in system– contaminated lubricant	Polish and inspect the kingpin, replace the bushing and seals, then follow the specified lubrication procedures.
	Incorrect lubricant	Lubricate the axle with specified lubricant.
	Axle not lubricated at scheduled frequency	Lubricant the axle at the scheduled frequency.
	Incorrect lubrication procedures	Use the correct lubrication procedures.
	Lubrication interval not compatible with operating conditions	Change the lubrication interval to match operating conditions.
	Worn or missing seals	Replace the worn or missing seals.
Vibration or shimmy of front axle during operation	Caster out of specification	Verify the rear air suspension(if equipped) is at the proper ride height if equipped, then adjust caster to specification.
	Wheels and/or tires out of balance	Balance or replace the wheels and/or tires.
	Worn shock absorbers	Replace the shock absorbers.
	Worn thrust washers (if equipped) and rear hanger clamps	Replace the thrust washers (if equipped) and rear hanger clamps.
	Broken engine mount	Replace the engine mount.
	Wheel bearing adjustment	Perform a wheel bearing adjustment, refer to the Alignment & Adjustment section.
Excessive wear on tires or uneven tire tread wear	Tires have incorrect air pressure	Adjust the tire pressure to the vehicle manufacturer’s specification.
	Tires out of balance	Balance or replace the tires.
	Incorrect tandem axle alignment	Align the tandem axles.
	Incorrect toe setting	Adjust the toe-in to vehicle manufacturer’s specification.
	Incorrect steering arm geometry	Repair the steering system as necessary.
	Worn kingpin bushings	Replace the kingpin bushings.
	Excessive wheel bearing end play	Check the specified wheel nut torque, replace worn or damaged wheel bearings.
	Wheel bearing adjustment	Perform a wheel bearing adjustment, refer to the Alignment & Adjustment section.
Vehicle is hard to steer	Low pressure in the power steering system	Repair the power steering system.
	Steering linkage needs lubrication	Lubricate the steering linkage.
	Steering knuckles are binding	Check the vertical clearance.
	Incorrect steering arm geometry	Repair the steering system as necessary.
	Caster out of specification	Adjust the caster to specification applicable.
	Tie rod ends hard to move	Replace the tie rod ends.
	Worn thrust bearing	Replace the thrust bearing.
	Steering gear box internal problem	Perform the steering gear troubleshooting procedures per steering gear manufacturer’s guidelines.



STEERTEK NXT High Capacity System for Fire and Rescue Vehicles

TROUBLESHOOTING GUIDE (continued)		
CONDITION	POSSIBLE CAUSE	CORRECTION
Tie rod ends are worn and require replacement	Tie rod ends need lubrication	Lubricate the tie rod end. Make sure lubrication schedule is followed.
	Severe operating conditions	Increase the frequency of inspection and lubrication intervals.
	Damaged boot on tie rod end	Replace the tie rod end.
Bent or broken cross tube, tie rod end ball stud or tie rod end NOTE: Damaged components require replacement	Pump/gear relief valve pressure setting exceeds system specifications	Adjust the power steering system to vehicle manufacturer's specified pressure.
	Steering gear poppets improperly set or malfunctioning	Check for proper operation or adjust poppets to vehicle manufacturer's specifications.
	Axle stops improperly set	Set the axle stops to the vehicle manufacturer's specifications.
	Severe duty cycle service	Increase the frequency of inspection and lubrication intervals.
Worn or broken steering ball stud	Drag link fasteners lightened past specified torque	Tighten the drag link fasteners to vehicle manufacturer's specified torque.
	Lack of lubrication or incorrect lubricant	Lubricate the linkage with specified lubricant.
	Power steering stops out of adjustment	Adjust the steering stops to vehicle manufacturer's specifications.
Suspension has harsh or bumpy ride	Broken or worn leaf spring	Replace the leaf spring assembly.
	Front suspension overloaded	Redistribute the steer axle load.
Restricted steering radius	Steering stops not adjusted correctly	Adjust the steering stops to achieve correct wheel cut.
Vehicle leans	Suspension fasteners are not tighten to the correct torque spec at installation	Re-torque procedure to specification, refer to the Torque Specifications section of this publication.
	Brocken leaf spring	Replace the leaf spring assembly.
	Excessive weight bias	Contact the vehicle manufacturer or Hendrickson Tech Services.
Vehicle wanders	Caster out of specifications	Adjust the caster to specification, refer to the Alignment Specifications section in this publication.
	Incorrect toe setting	Adjust the toe to specification.
	Air in the power steering system	Remove the air from the power steering systems.
	Rear air suspension ride height is out of adjustment	Adjust the rear air suspension to the proper ride height.





Actual product performance may vary depending upon vehicle configuration, operation, service and other factors. All applications must comply with applicable Hendrickson specifications and must be approved by the respective vehicle manufacturer with the vehicle in its original, as-built configuration. Contact Hendrickson for additional details regarding specifications, applications, capacities, and operation, service and maintenance instructions.

*Call Hendrickson at **1.866.755.5968** (toll-free) or **1.630.910.2800** for additional information.*



www.hendrickson-intl.com

TRUCK COMMERCIAL VEHICLE SYSTEMS
800 South Frontage Road
Woodridge, IL 60517-4904 USA
1.866.755.5968 (Toll-free U.S. and Canada)
1.630.910.2800 (Outside U.S. and Canada)
Fax 1.630.910.2899

17730-311 Rev C 04-23

© 2018 – 2023 Hendrickson USA, L.L.C. All Rights Reserved. All trademarks shown are owned by Hendrickson USA, L.L.C., or one of the affiliates, in one or more countries.

Information contained in this literature was accurate at the time of publication. Product changes may have been made after the copyright date that are not reflected.

Printed in United States of America